
# **All Terrain Cart Manual**



Additional Accessories Available for Purchase at drdishbasketball.com/accessories

# **COMPONENTS**

Rear Frame

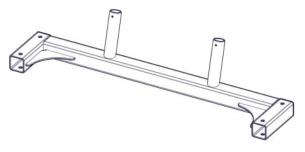


Handle

2

M10 Bolt x 8



Locking Pin x 2






Right Frame x 1




Left Frame x 1

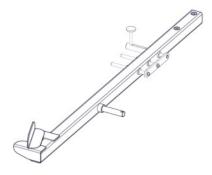


Wheel x 2



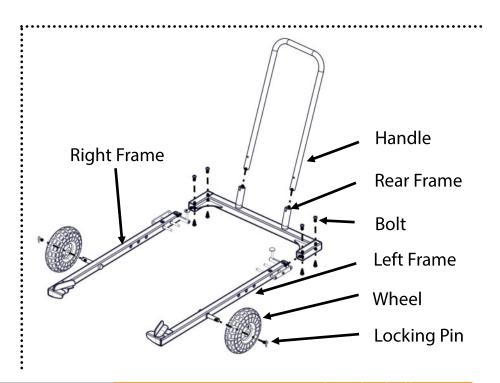

### **ASSEMBLY**

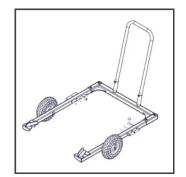


3

### 1. Attach Frame


Install left and right frames to rear frame using 8 bolts.



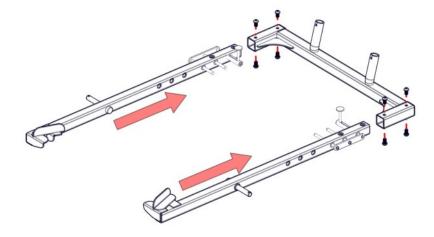


### 2. Attach Handle

Install handle into rear frame until it clicks/snaps in place.

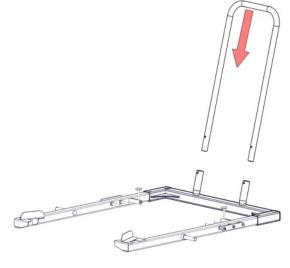

### 3. Attach Wheels

Install wheels using 2 locking pins to secure in place.

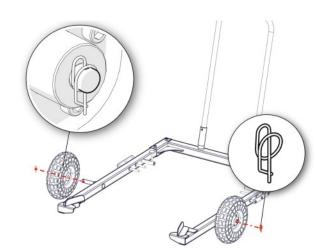


#### TRANSPORTING MACHINE

# 1. Align Cart


Push pins out on each side.

Align cart on back side of the machine.

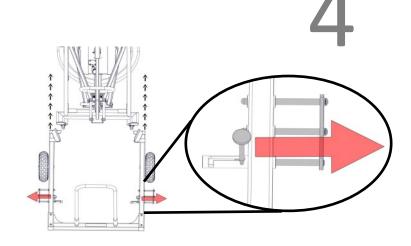


#### 2. Cart Over Back Wheels

Push down on handle to lift front of cart up and over the back wheels of the machine.

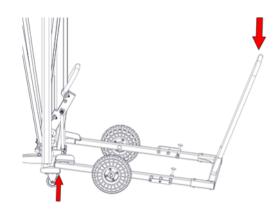

#### 3. Push Forward

Level cart and push all the way forward so front ledges fit securely under the frame.

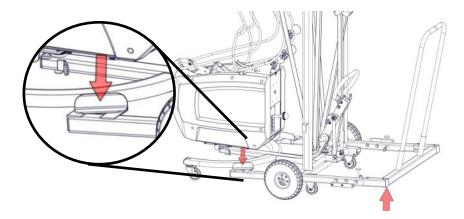

# 4. Lock in Machine

On both sides, align the back pins beside rear wheels. Push pins in to lock wheel. Pivot locking knob down towards back handle

