


Dr. Dish User Manual


Rebel



Pro SMART

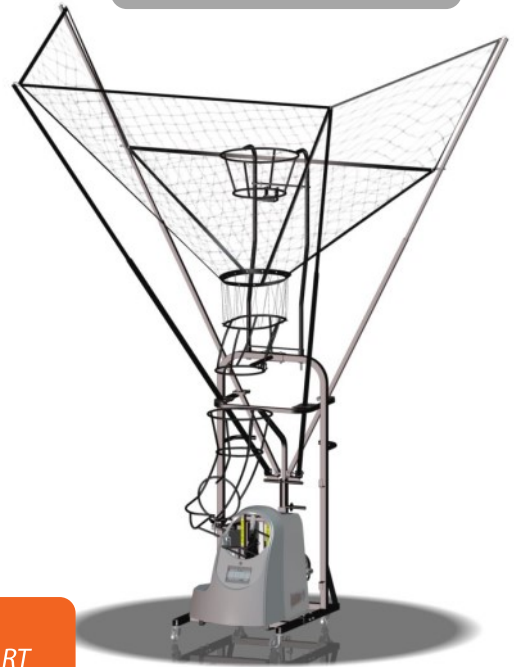

All-Star SMART

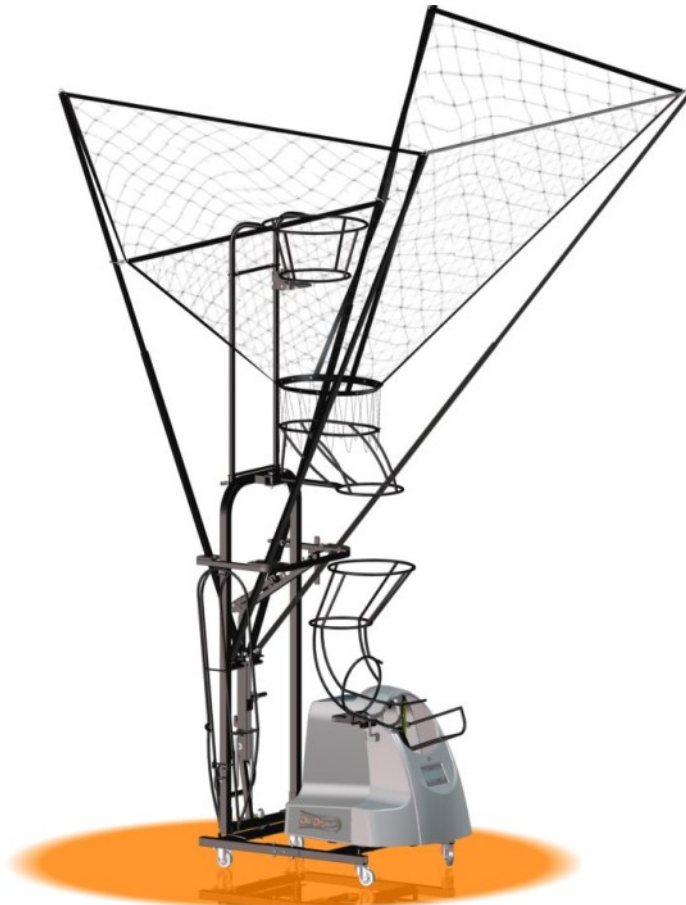

Product specifications

Product storage Dimensions	42in x 30in x 78in (LxWxH)
Product weight	Rebel without accessories 230lbs Rebel and Pro with accessories 268 lbs All-Star with accessories 280 lbs

Power Supply Specifications

Input rating	100—240v AC 2.5A
--------------	------------------

The power supply automatically senses the correct voltage.

Frequency	60hz
Output Rating	24v DC 180W

Safety



Applicable Standards

ASTM F2276-10	Standard Specification for Fitness Equipment
---------------	--

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

3

1. Read all the instructions before using the machine.
2. To reduce the risk of injury, close supervision is necessary when the machine is used near children.
3. Do not contact moving parts. Pay attention to crush points as designated by caution labels.
4. Only use the attachments recommended or sold by the manufacturer.
5. Do not use outdoors.
6. To disconnect, turn all controls to the off position, then remove plug from outlet.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Unplug from outlet when not in use and before servicing or cleaning.
9. Do not operate machine with damaged cord or plug, or after the machine malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
10. If maintenance is required, please contact manufacturer.
11. This machine incorporates an earth connection for functional purposes only.
12. This is not a toy and intended for use by or under the supervision of Adults.

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of malfunction or breakdown, grounding provides a path of least resistance for the electric current to reduce the risk of electrical shock. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

⚠ CAUTION ⚠ ATTENTION

This Is Not A Toy and Intended for Use By or Under the Supervision of Adults.

Ceci n'est pas un jouet et est destiné à être utilisé par ou sous la surveillance d'adultes

⚠ WARNING

READ ALL SAFETY WARNINGS AND INSTRUCTIONS.

Failure to follow the warnings and instructions may result in electrical shock, fire and/or serious injury.

Contents

General Information.....	5
Parts Detail.....	7
Product Labeling	8
Assembly	9
Feature Locations.....	10
Net System.....	11
Swivel Net System (All-Star Models only).....	13
Shots Made Counter (Pro and All-Star Models only).....	18
Assembly.....	18
Installing.....	19
Storage.....	21
Power	22
Ball Launch Distance	23
Placement	24
Console Instructions	25
Controls	25
Password	26
Basic Workouts	26
Shooting from one location.....	26
Shooting from multiple locations.....	27
Choosing a Pre-Programmed Drill.....	28
Remote	29
Make & Streak Modes	29

Advanced Workouts (Pro and All-Star models only)	29
Using workouts.....	29
Types of workouts.....	30
Time.....	30
Shots Taken.....	30
Shots Made	30
Advanced	30
Multiplayer Compete.....	30
Interval.....	30
Locations based on Heart Rate.....	30
Real time Stats	31
2 point Shooting.....	31
Free -Throw Shooting.....	31
Pairing Dr. Dish to Device.....	32
Settings	33
Service and Troubleshooting.....	34
Maintenance Schedule.....	34
Troubleshooting.....	34
Cleaning	34
Warranty Information.....	35-37
Dr. Dish Accessories.....	38
Contact Information.....	39

GENERAL INFORMATION

Please read this manual before use of the Dr. Dish.

6

PRECAUTIONS

Storing

The Dr. Dish should be stored in a dry, dust-free environment.

Moving

The Dr. Dish can be moved with one person on a flat and level surface. If moving on an incline, two people are recommended.

Placement

The Dr. Dish should be used on a solid level surface.

Personal Safety

To reduce the risk of serious injury, read all important precautions and instructions in this manual and all warnings on your Product before use. It is the responsibility of the owner to ensure that all users of this Product are adequately informed of all warnings and precautions. Use the Product only as described in this manual. Airborne Athletics assumes no responsibility for personal injury or property damage sustained by or through the use of this Product.

Playing basketball, or training in the sport of basketball, is exercise. How you begin your exercise program depends on your physical condition. Before beginning any exercise program, consult your physician. This is especially important for persons over age 35 or persons with pre-existing health problems. Frequent and strenuous exercise should be approved by your doctor first.

Warming up is an important part of your workout, and should begin every session. It prepares your body for more strenuous exercise by heating up and stretching out your muscles, increasing your circulation and pulse rate, and delivering more oxygen to your muscles. At the end of your workout, repeat the warm up exercises to reduce sore muscle problems.

If any discomfort should result from your use of this Product, stop exercising and consult your doctor. While performing any type of exercise routine you must drink plenty of fluids. You must replace the water lost from exercising to avoid dehydration. Avoid drinking large amounts of cold liquids. Fluids should be at room temperature when consumed. It's important to work at your own pace.

Please keep all children away from the Product when Product is unattended. Adult supervision is required at all times during use of this Product.

Please ensure this product is assembled and installed by adults.


Equipment

Inspect the Dr. Dish before use to ensure working order.

Power supply

Only use the power supply provided with the Dr. Dish. **DO NOT REMOVE POWER SUPPLY FROM TRAY.**


ITEMS IN PARTS BOX

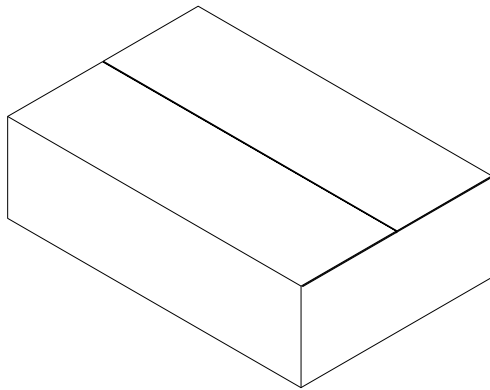


M6 bolt x 4




M10 bolt x 2
(Pro & All-Star only)




M10 lock nut x 2
(Pro & All-Star only)



Remote
(Pro & All-Star only)




Ball Speed handle

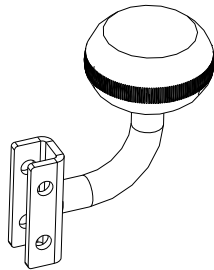


4mm Allen Wrench



8mm Allen Wrench
(Pro & All-Star only)

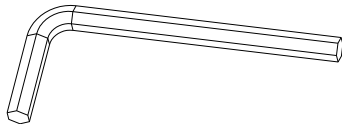

17mm Wrench
(Pro & All-Star only)




7

SHOTS MADE COUNTER PARTS


Shots Made Counter Head

(Pro and All-Star only)

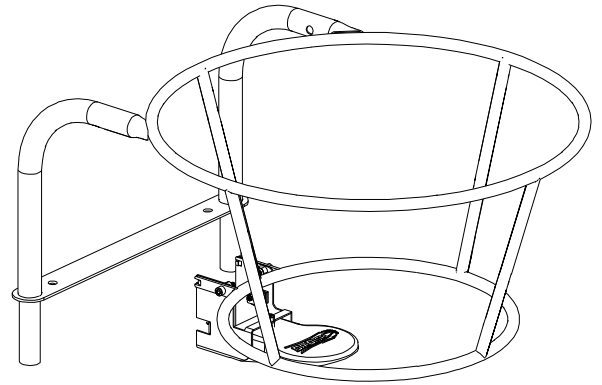



Shots Made Counter Handle

(Pro & All-Star only)

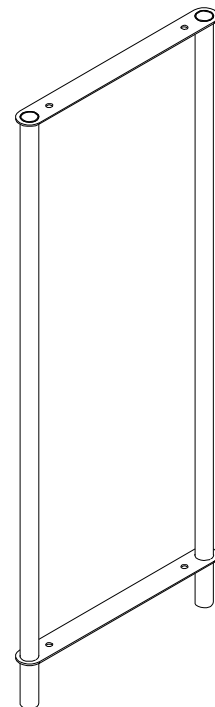


PRODUCT LABELING

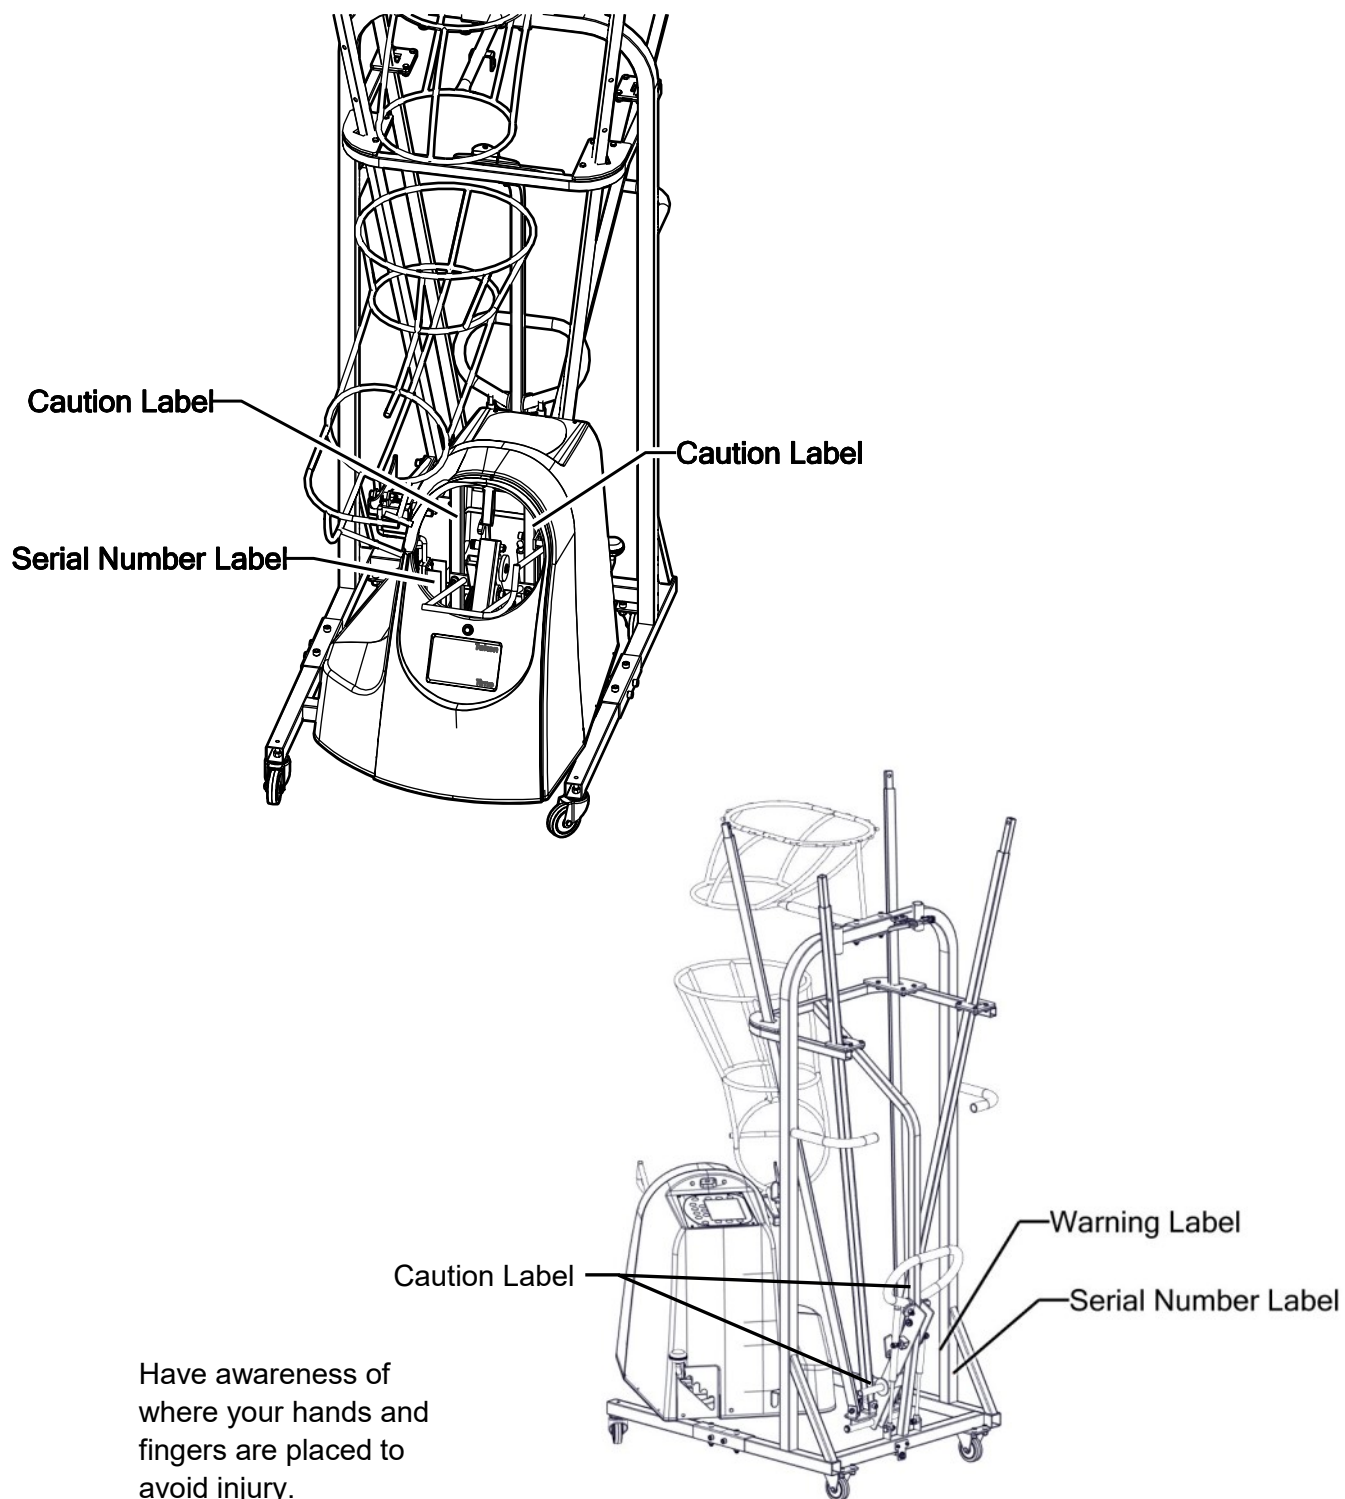

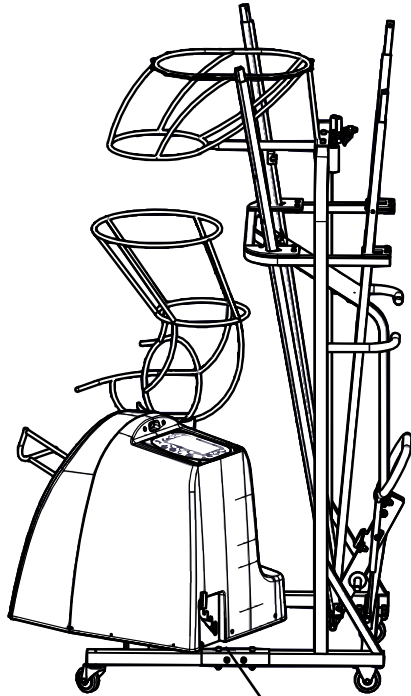

May be pre-assembled
from the factory

**Install ball speed handle
using 4 M6 bolts**


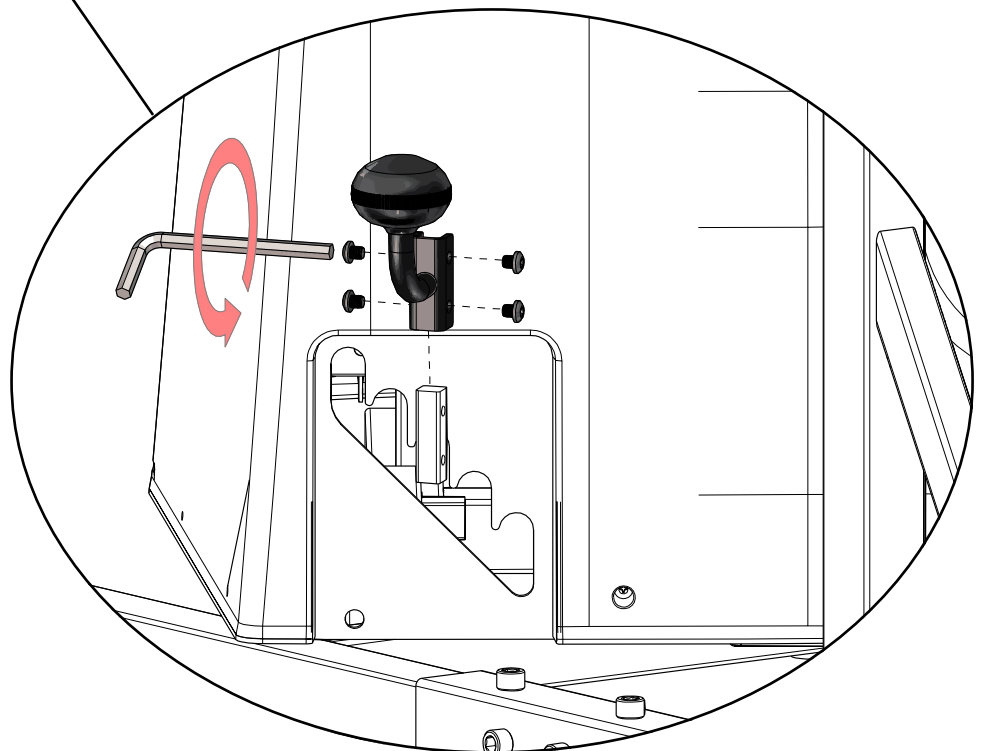


Note: Move to level
3 to access all bolts
(See page 23)

DR. DISH

Feature Locations

10

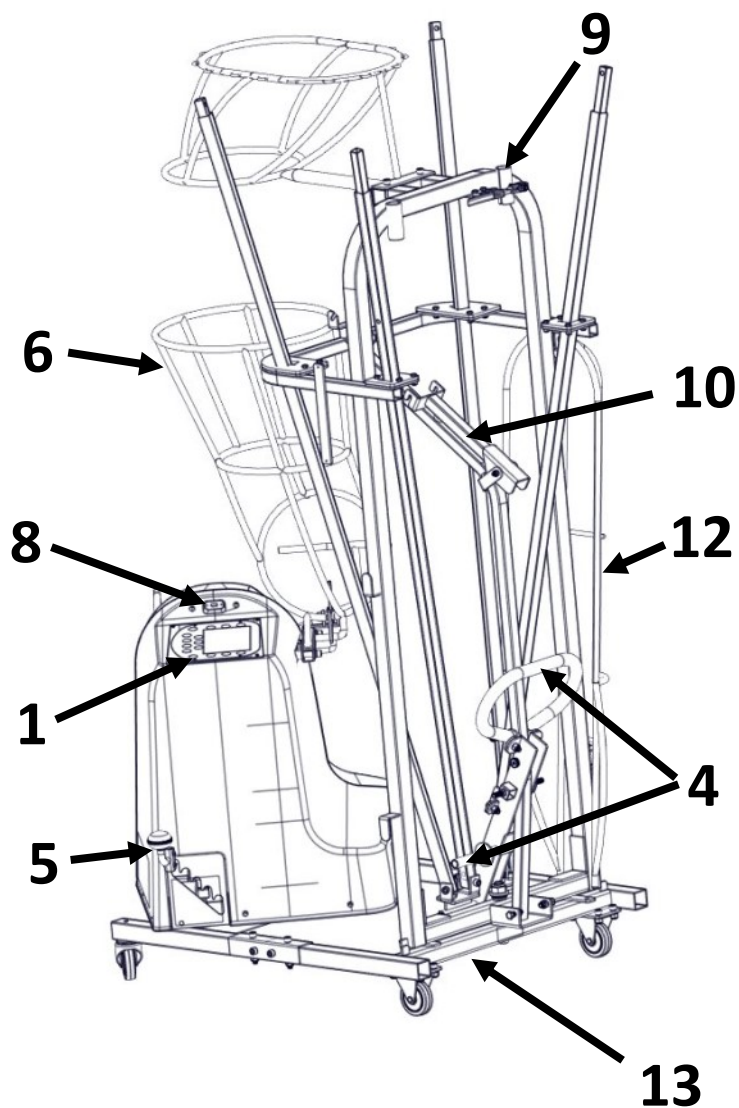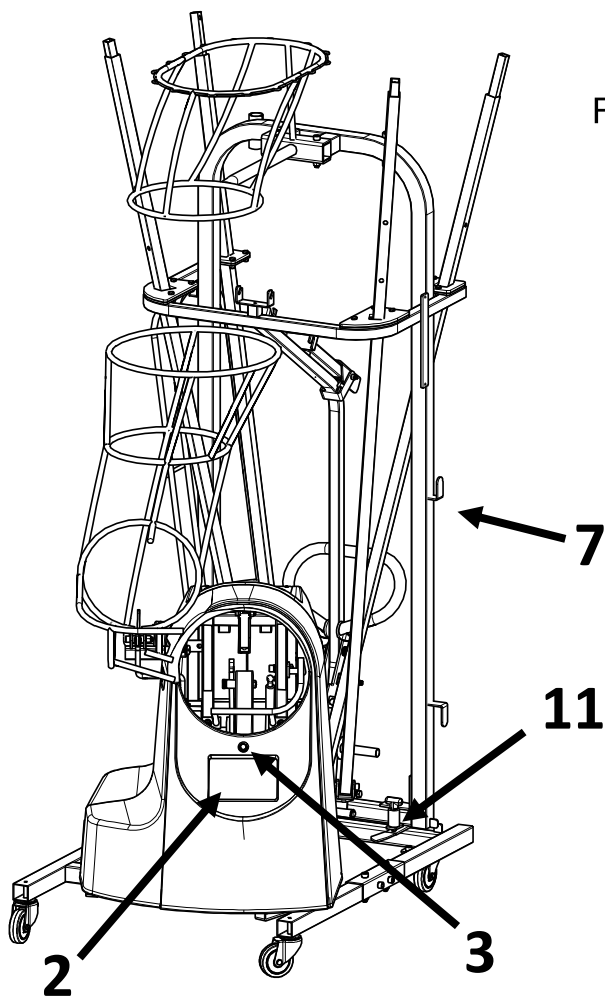


1. LCD and Touchpad
2. LED Front Display
3. Pre-launch Safety Light
4. Net system handles
5. Ball Speed Adjust Knob
6. Ball Feeder
7. Extension cord holder
8. USB Port (Pro and All-Star models only)
9. Shots Made Counter Mounts (Pro and All-Star models only)
10. Ramp Catch Arm (All-Star model only)
11. Swivel frame release pin (All-Star model only)
12. Pass and feed ball ramp (All-Star model only)
13. Power plug

NET SYSTEM

Raising Net


Step 1

Note: Machine must face as shown or damage to plastic may result.

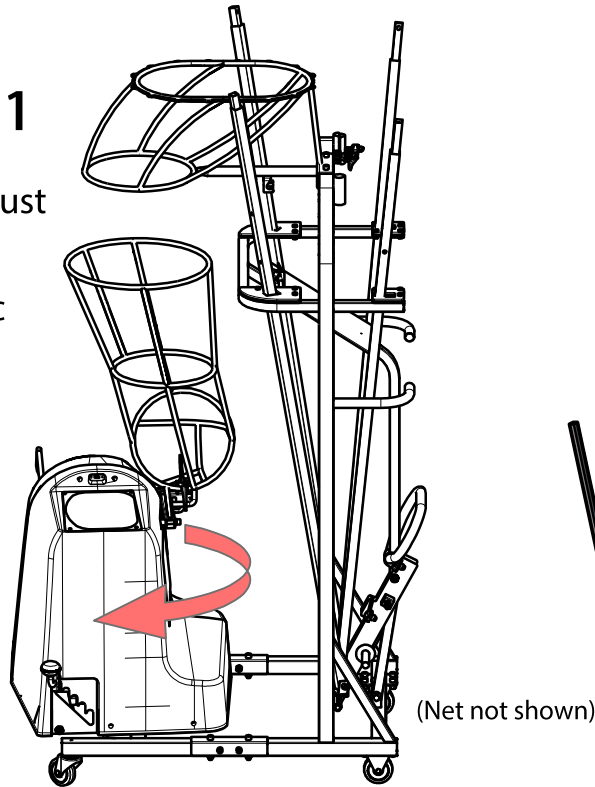

Step 2

Extend all 4 net extension poles
- To prevent damage, ensure net is not caught on frame.

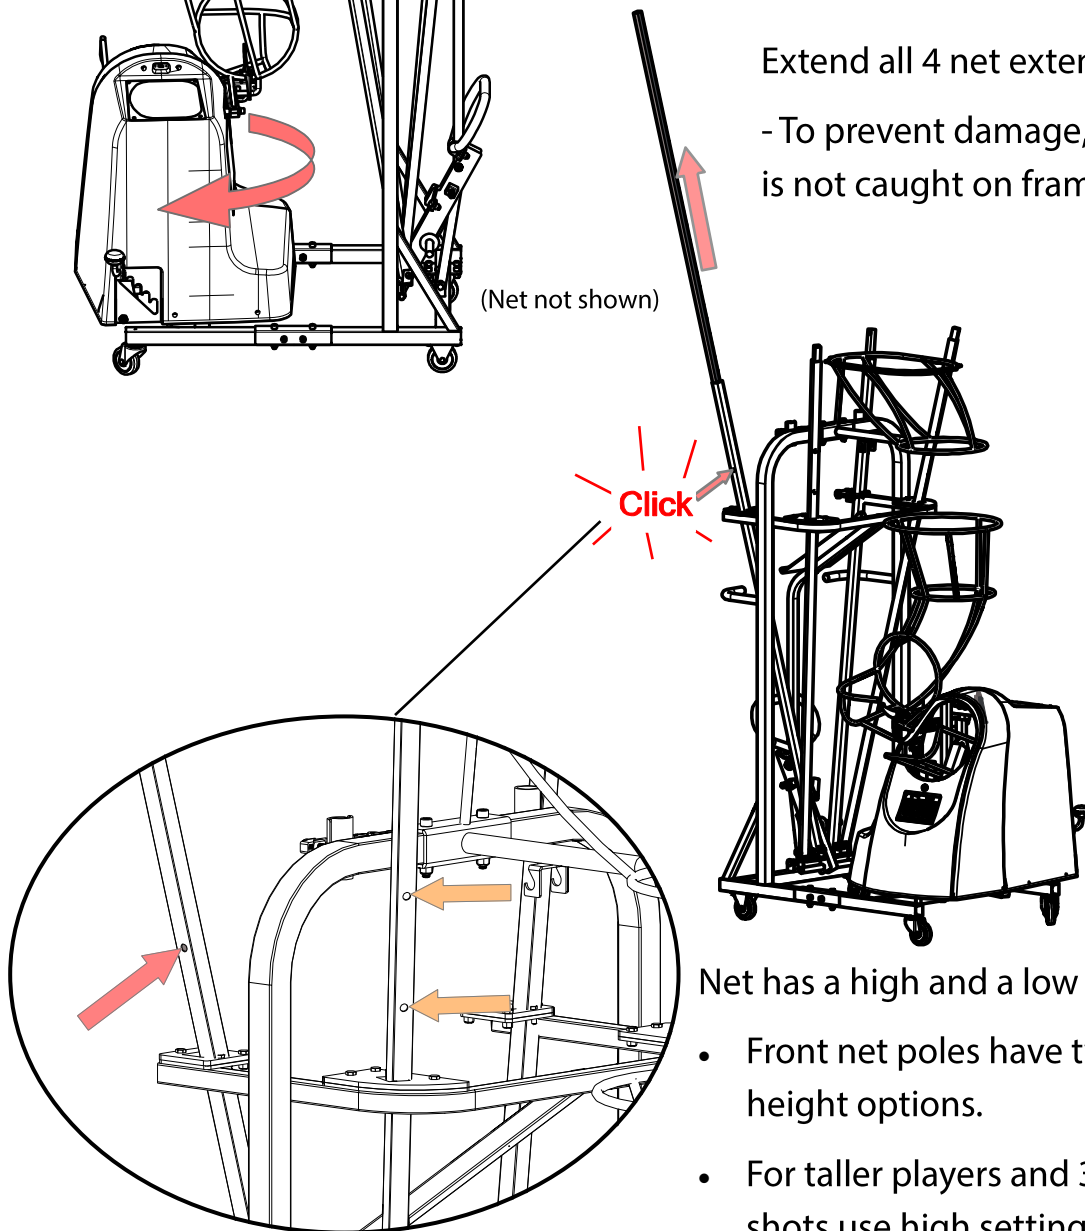

Net has a high and a low setting

- Front net poles have two height options.
- For taller players and 3 point shots use high setting.


Step 3

Use both hands to rotate handles clockwise to raise net.

Be aware of pinch points.




(Net not shown)

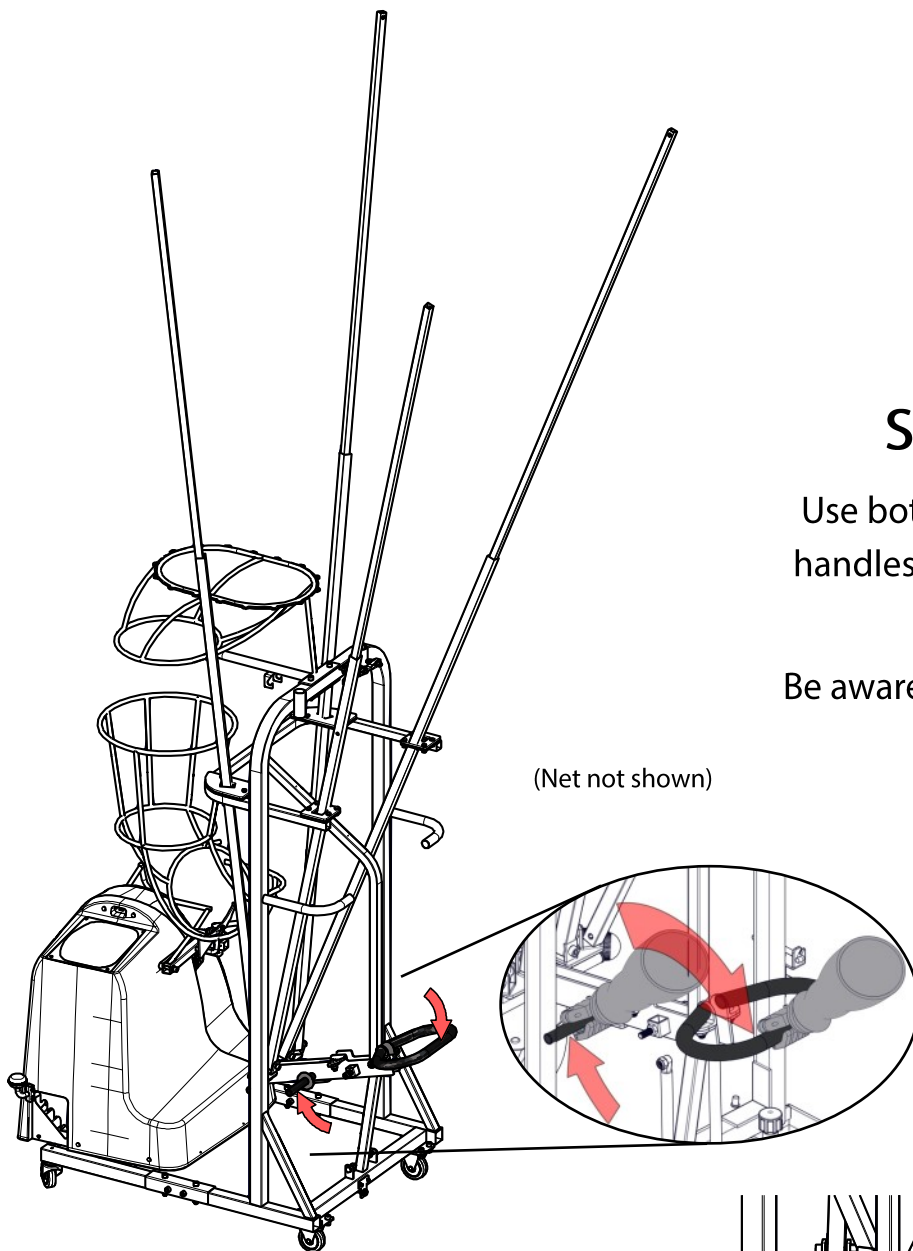

Step 4

Flip down safety latch to secure net in up position.

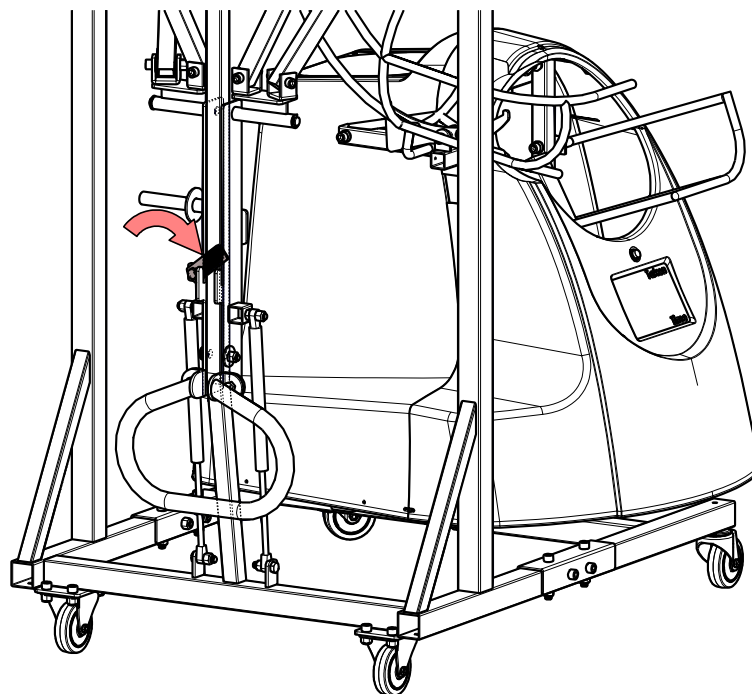


Reverse order to put net down

EASY SWIVEL NET SYSTEM

(All-Star model only)


Rotating net frame

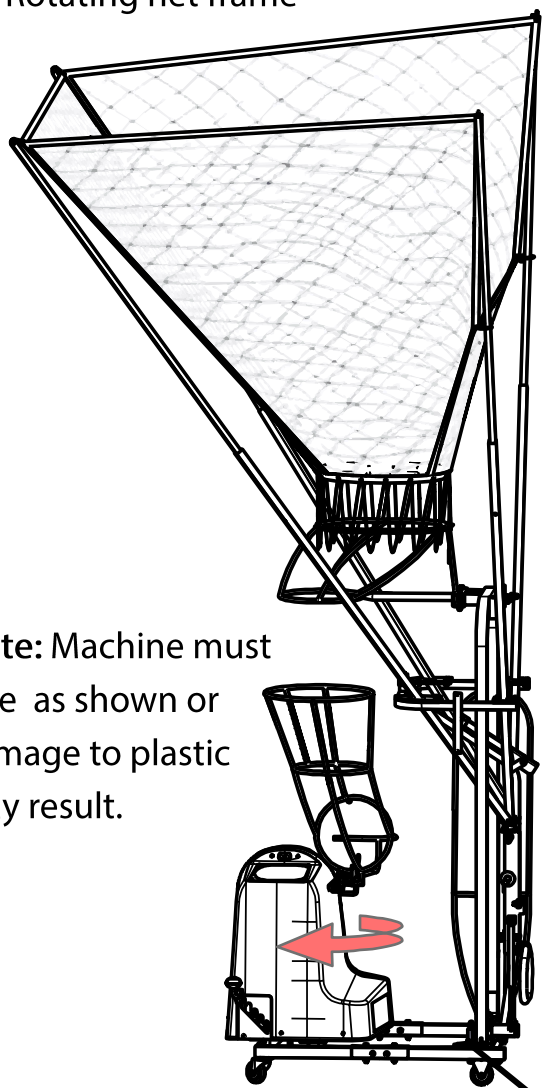

Step 1


Note: Machine must face as shown or damage to plastic may result.

Step 2

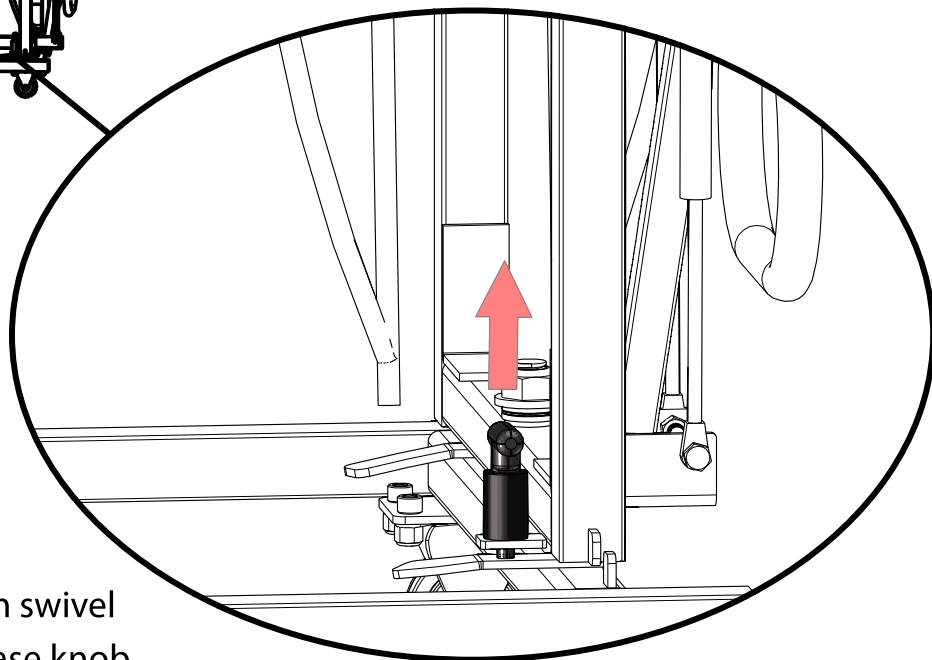


Pull up on swivel frame release knob.


Step 3

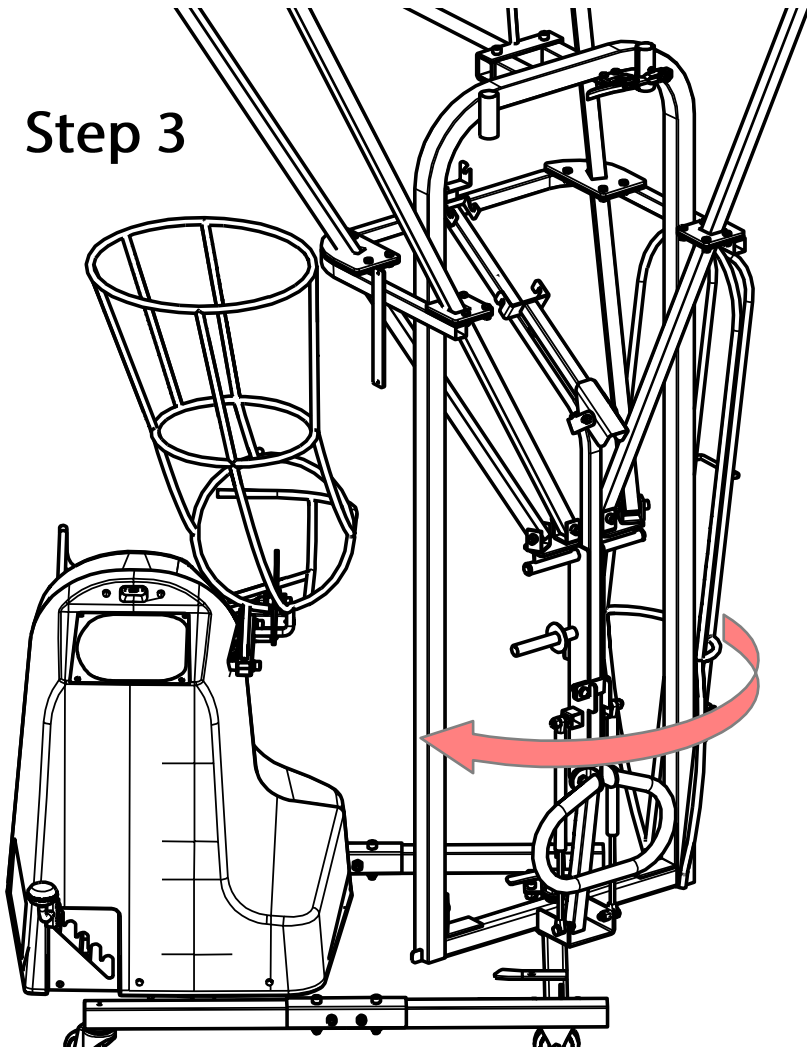

Rotate frame 180 degrees until pin clicks in position.

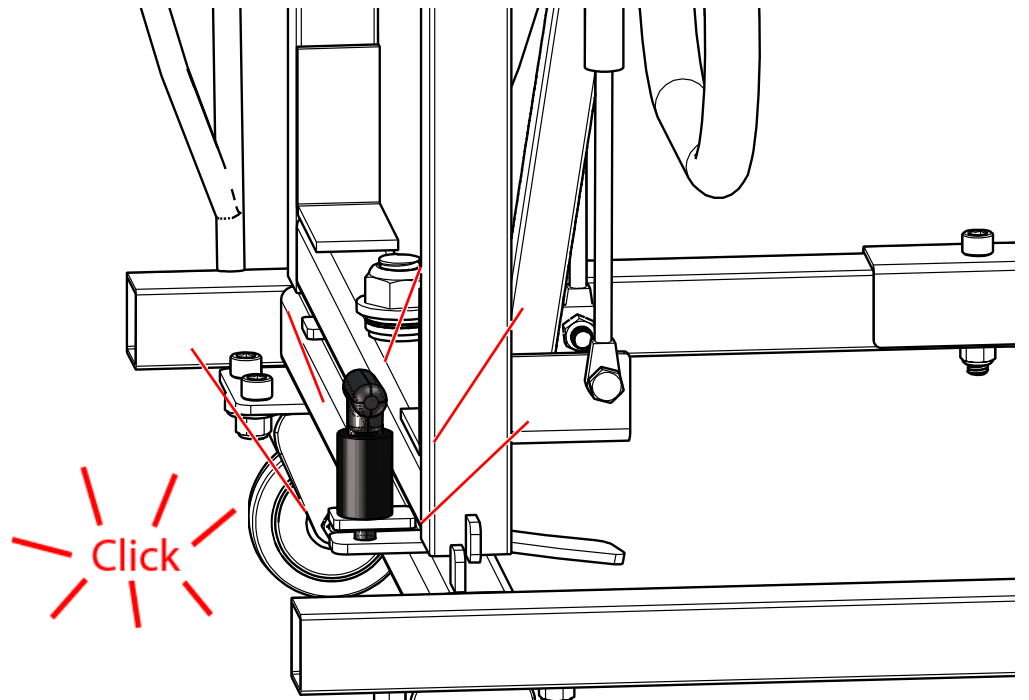


Step 4

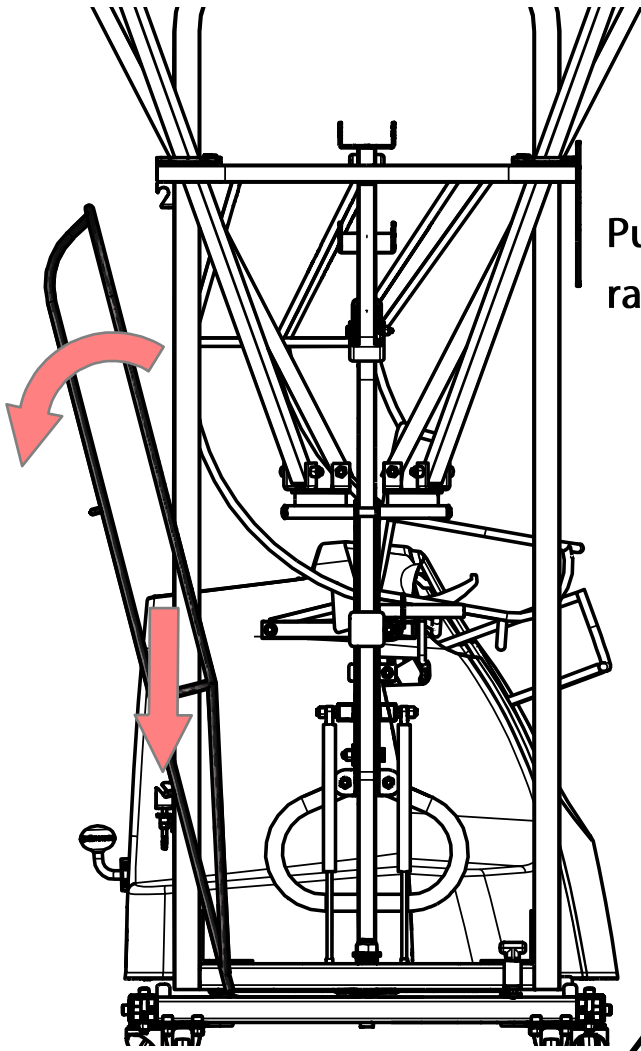


Push down and rotate Ball ramp out of storage


Step 5

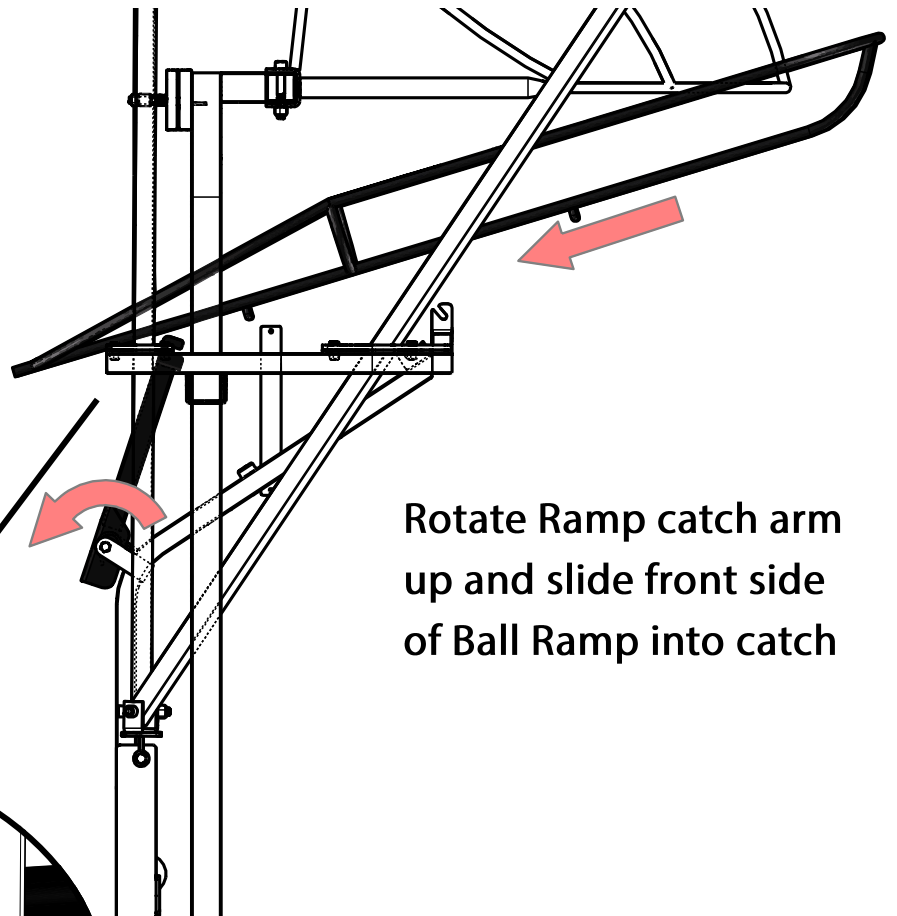

Rotate Ramp catch arm up and slide front side of Ball Ramp into catch

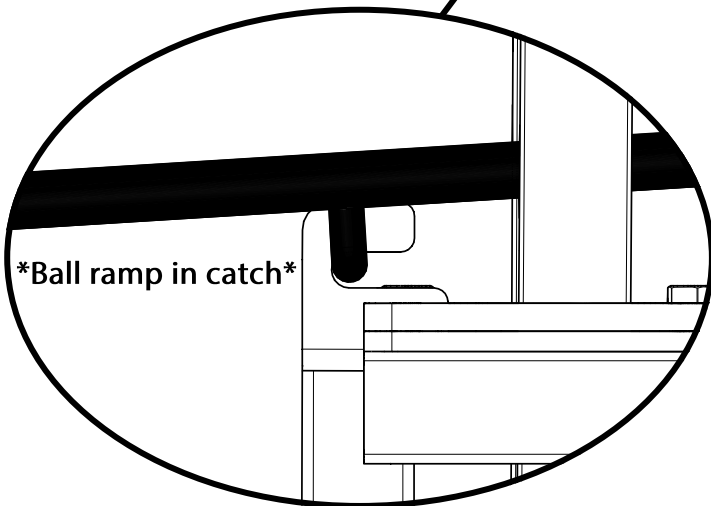


Step 6

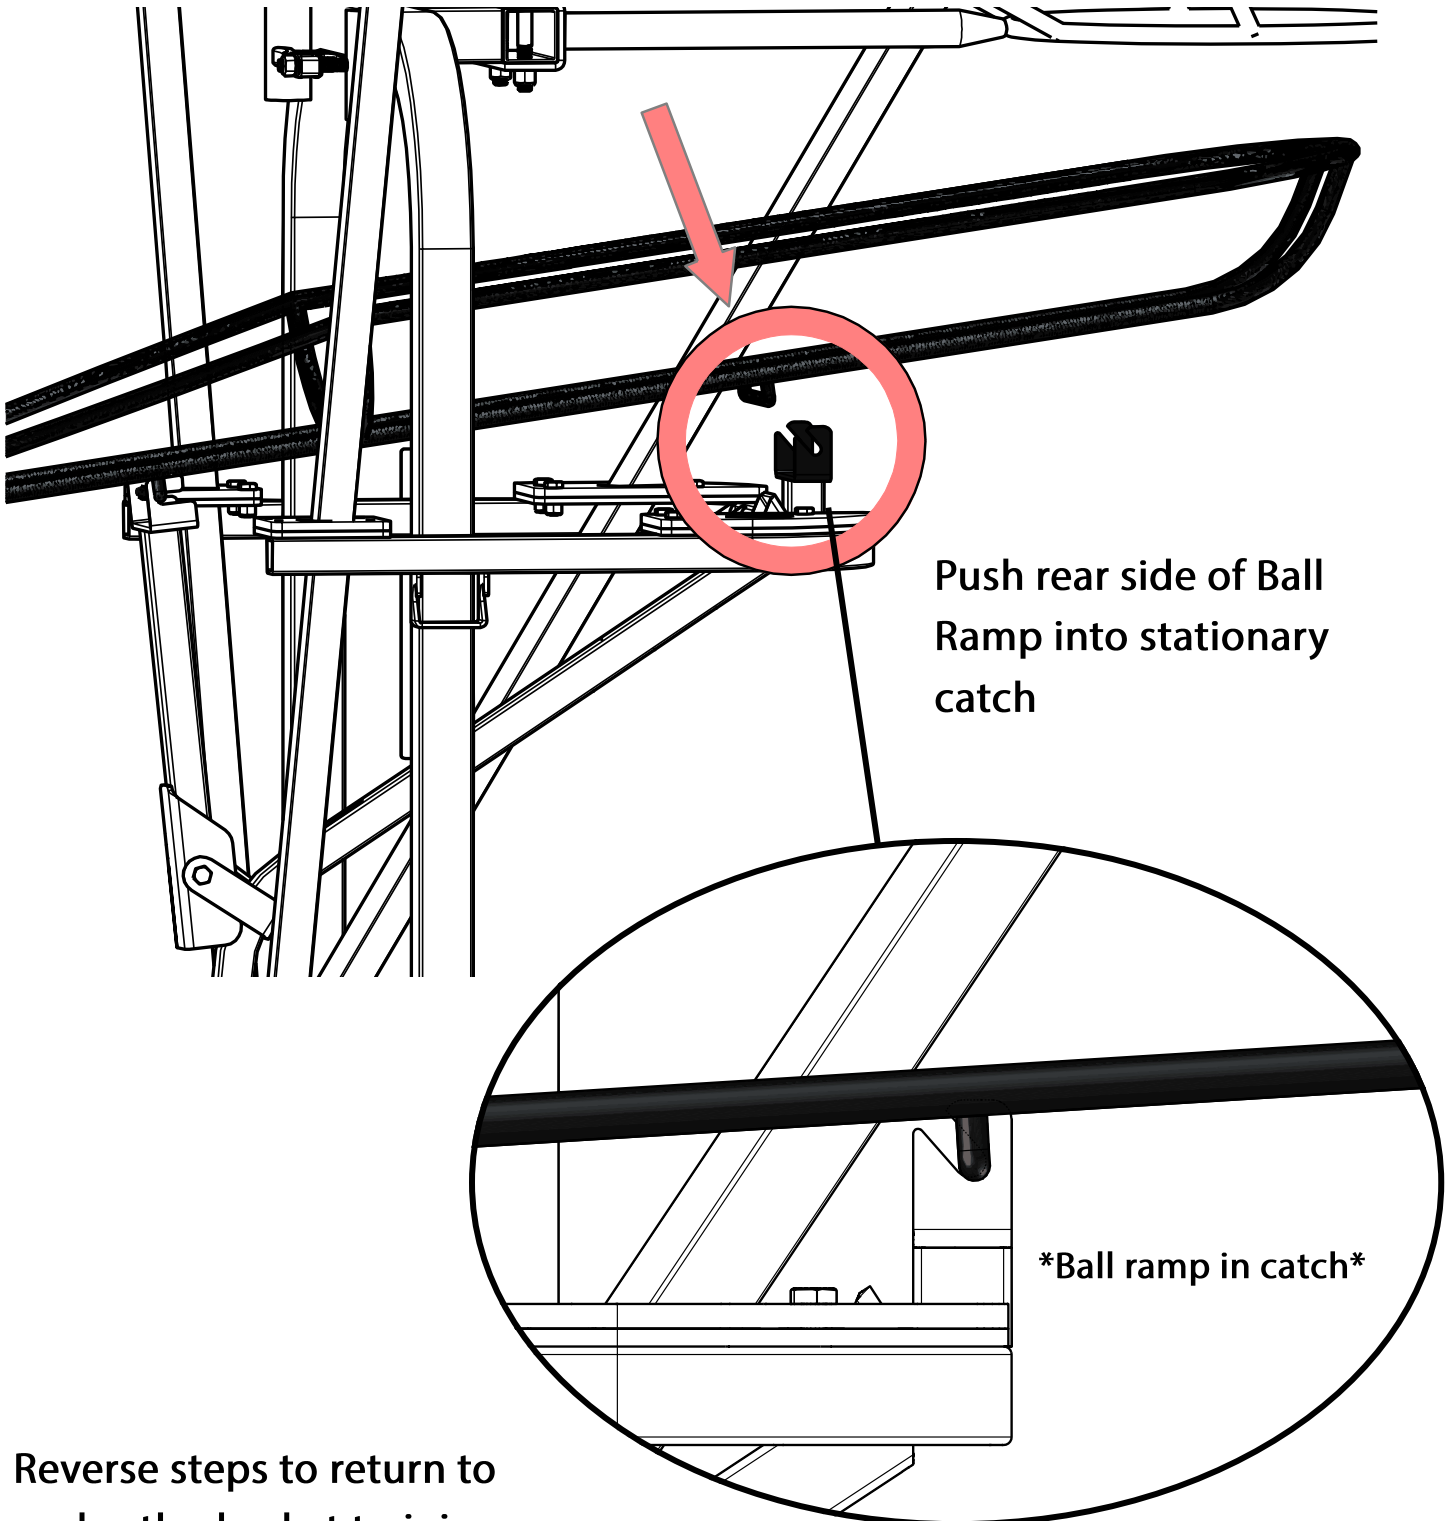

Reverse steps to return to under-the-basket training

All-Star away-from-basket setup

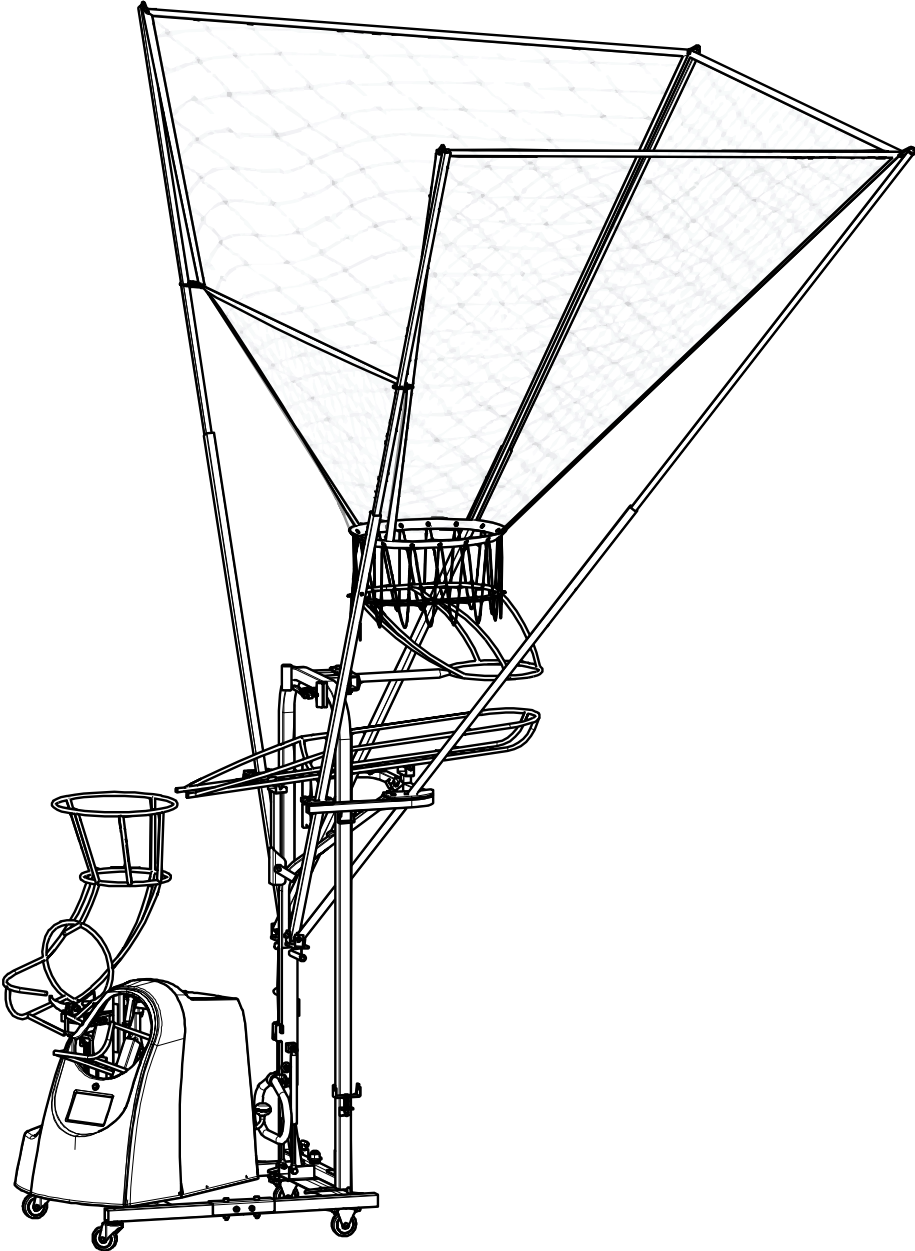



SHOTS MADE COUNTER

(Pro and All-Star models only)


Assembly

Use 17mm wrench and 8mm allen wrench (included) to install (2) M10 bolts and M10 lock nuts.


Thread cable through frame as shown.

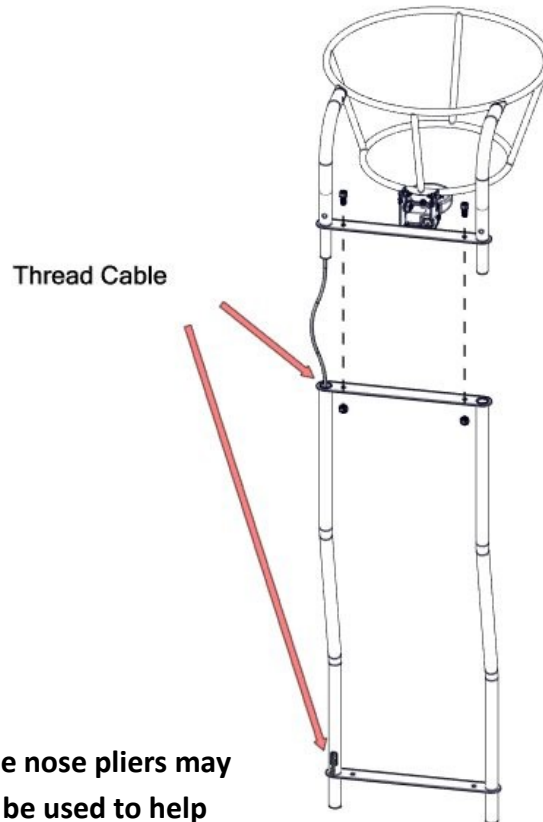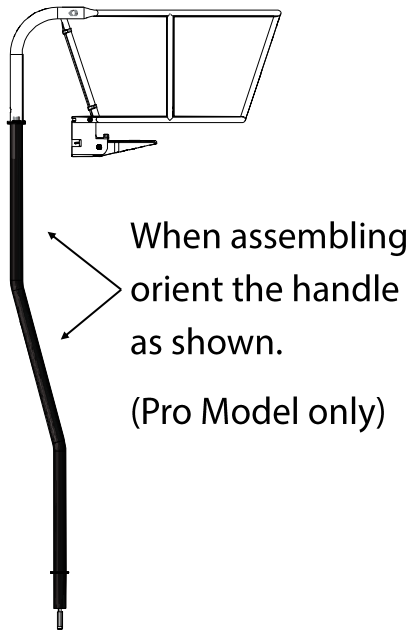

Completed Shots Made Counter

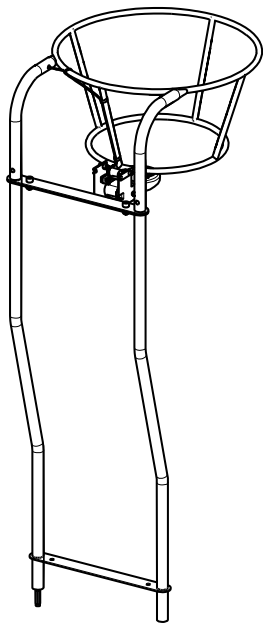

A needle nose pliers may need to be used to help pull the counter plug out of the slot in the handle.

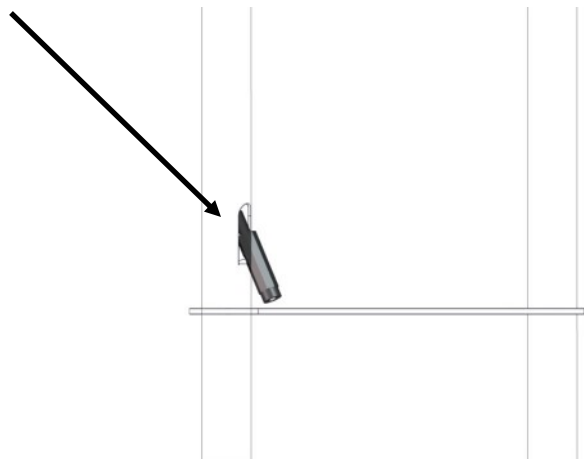

SHOTS MADE COUNTER


(Pro and All-Star models only)

Installing

19

Step 1

Raise counter up, over, and into net.

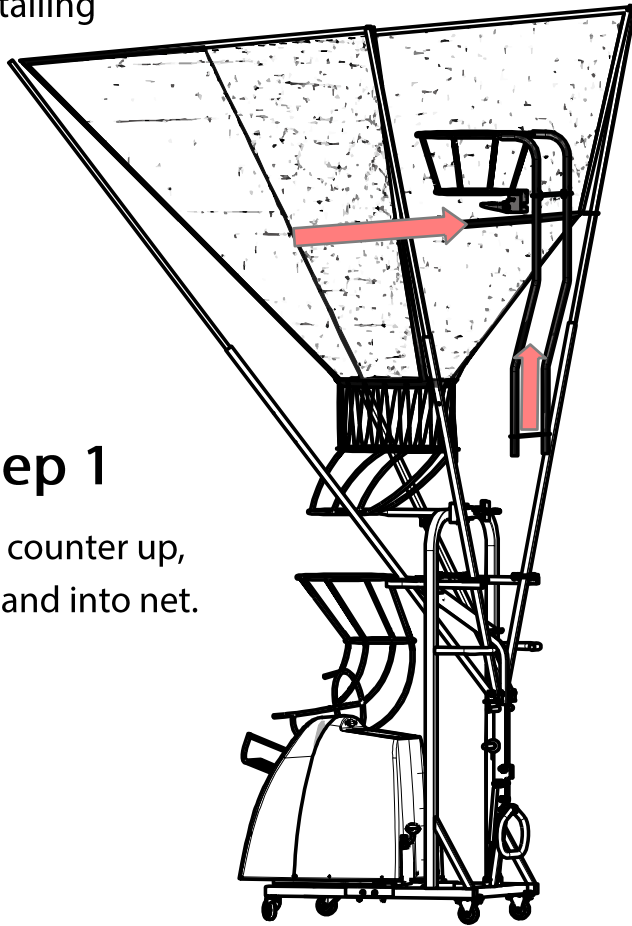

Step 2

Slide counter into tubes.




Step 3

Secure Shots Made Counter with knob

Step 4

Plug in Shots Made Counter wire

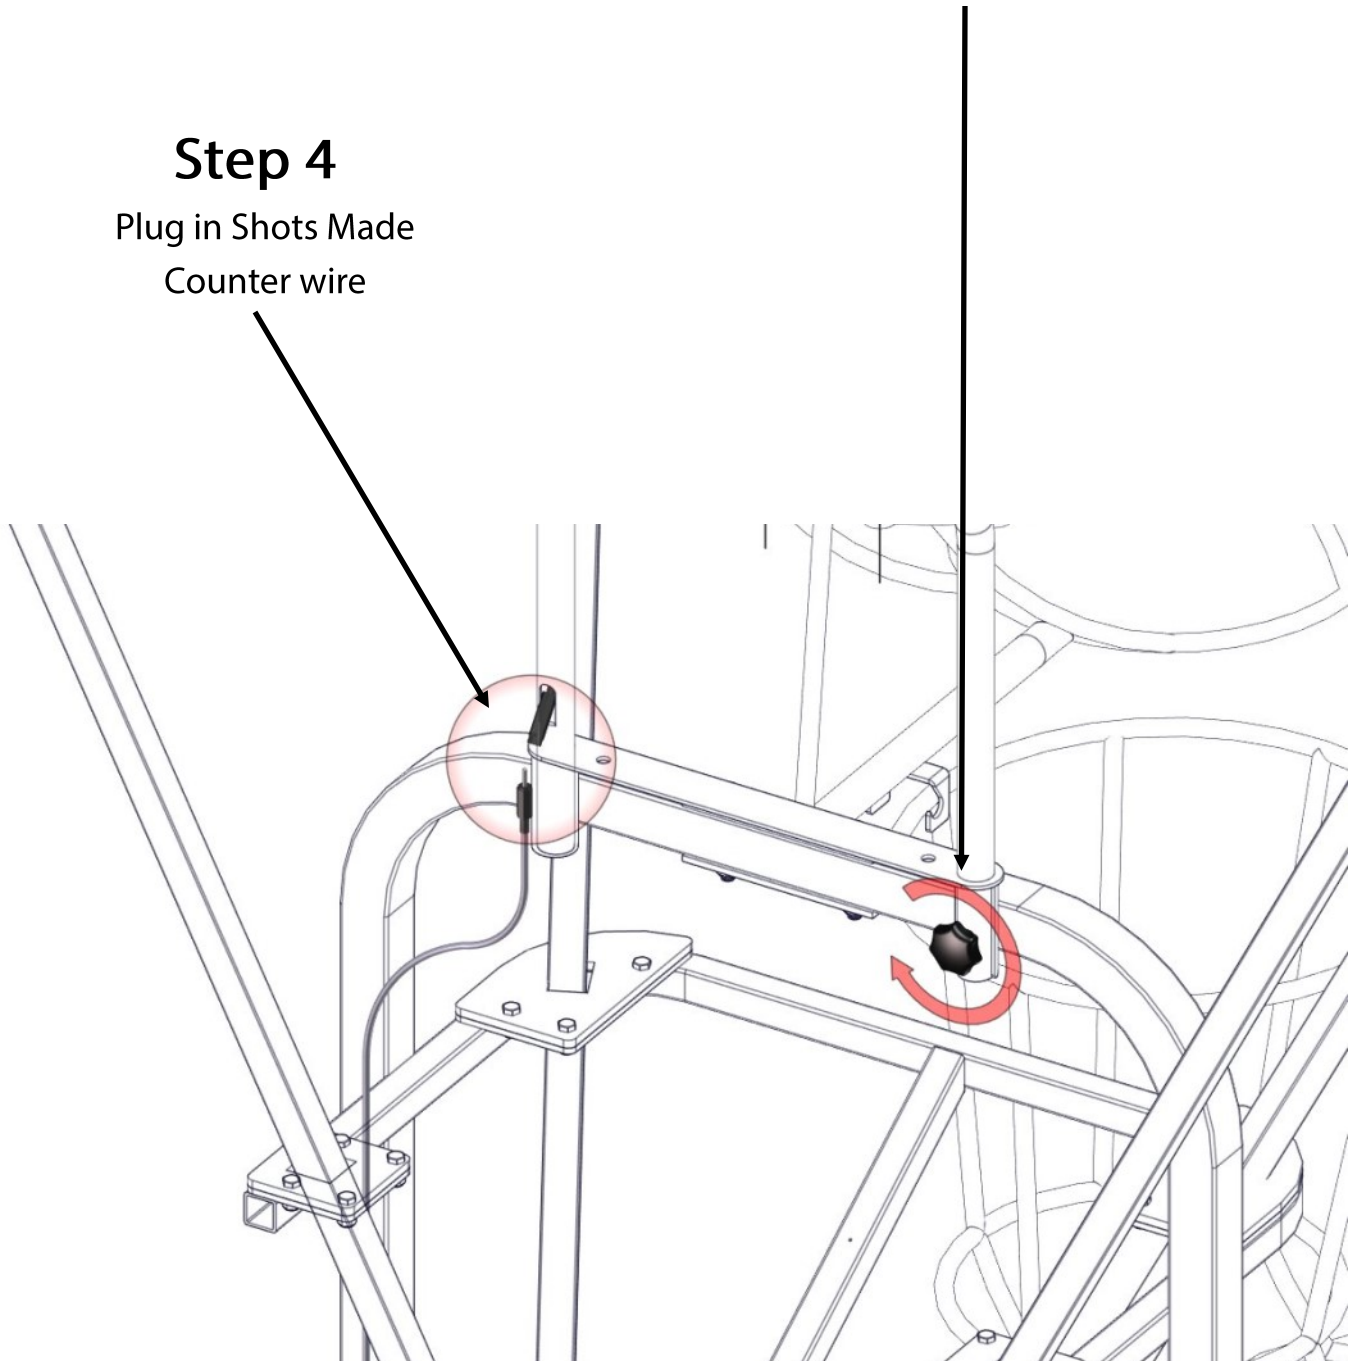


SHOTS MADE COUNTER


Storage

21


Hang counter from storage hook

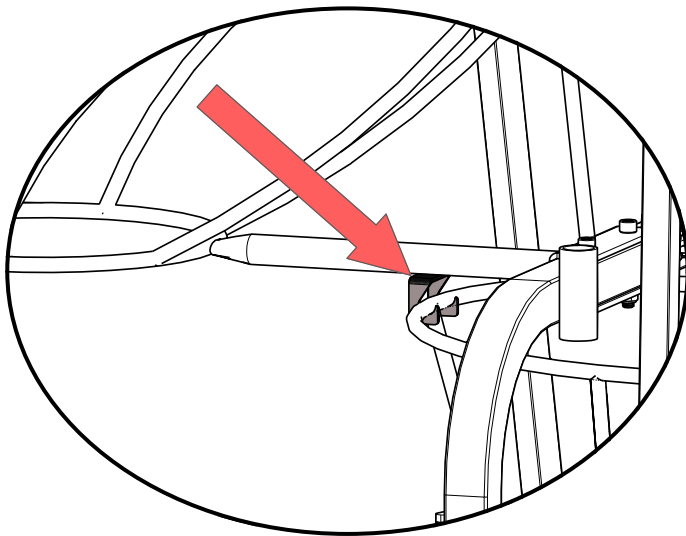


Pro Model

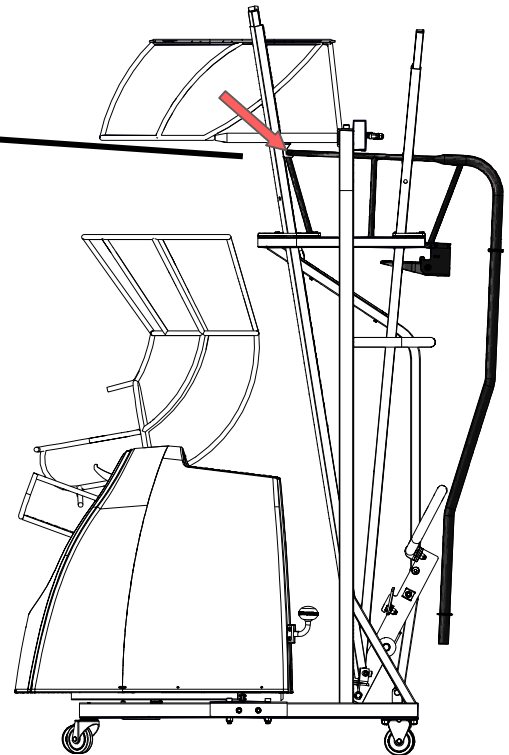

All-Star Model

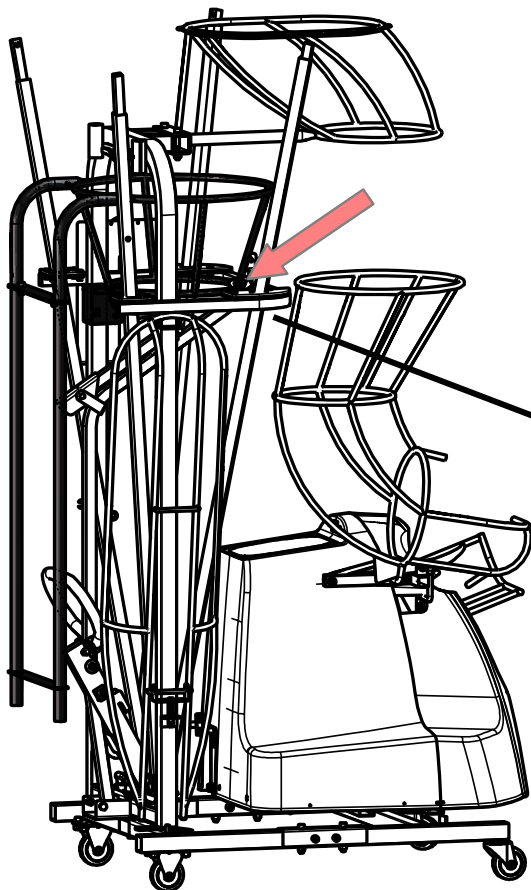

(Net not shown)

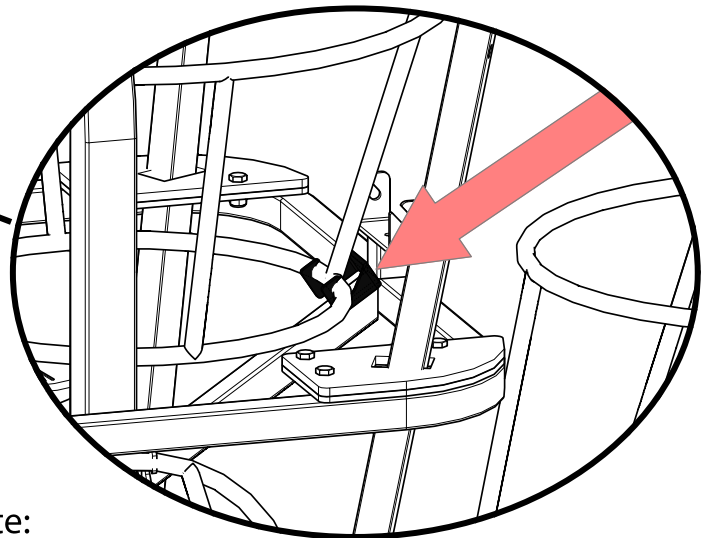

Note:

Counter must be removed from the frame prior to putting up and taking down the net.

POWER


This product requires a type W extension cord that is certified and rated for at least 120 V. Available for purchase on page 37.

⚠ WARNING

AVOID RISK OF FIRE, ELECTRICAL SHOCK, AND/OR SERIOUS INJURY. Do not expose to rain or moisture.


Do not remove power supply from tray.

Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician if you are in doubt as to whether the appliance is properly grounded. Do not modify the plug provided with the appliance. Never remove the grounding prong from the plug. If damaged, have it repaired by manufacturer before use. If the plug will not fit the outlet, have a proper outlet installed by a qualified electrician.

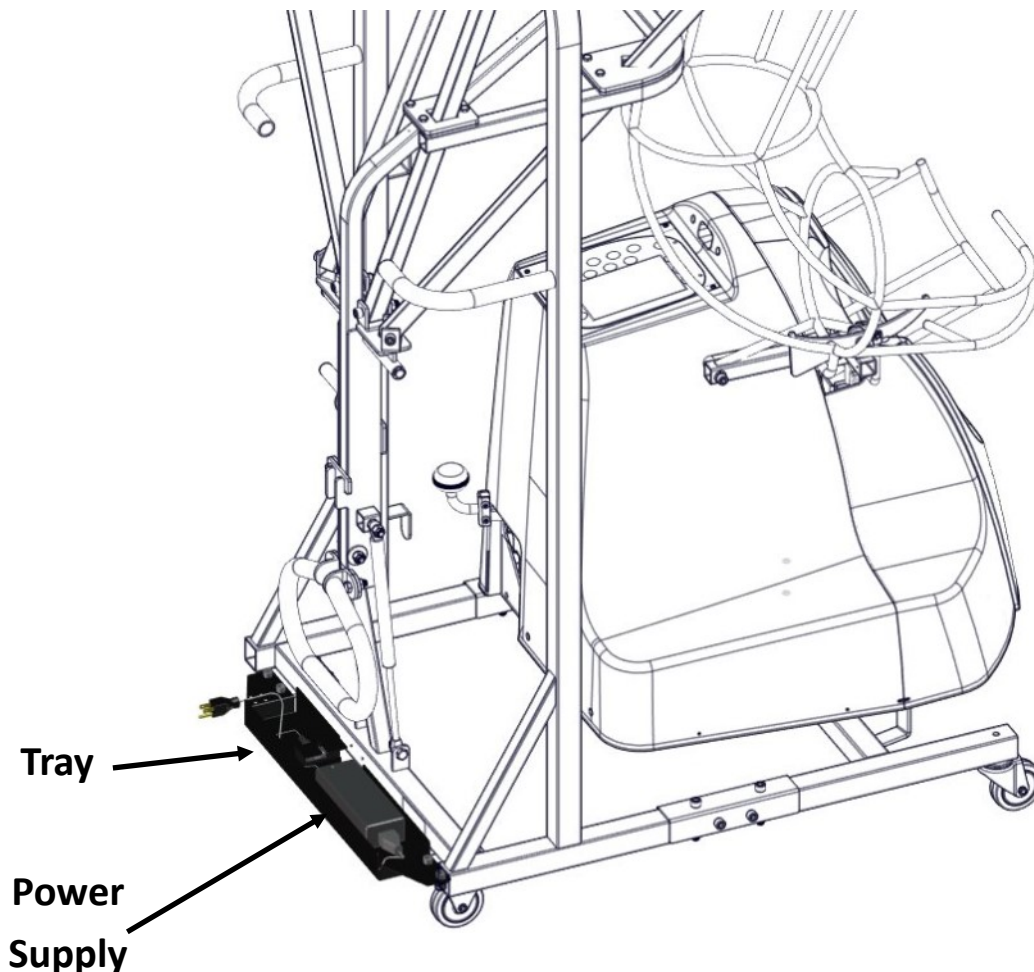


BALL LAUNCH DISTANCE

Adjusting

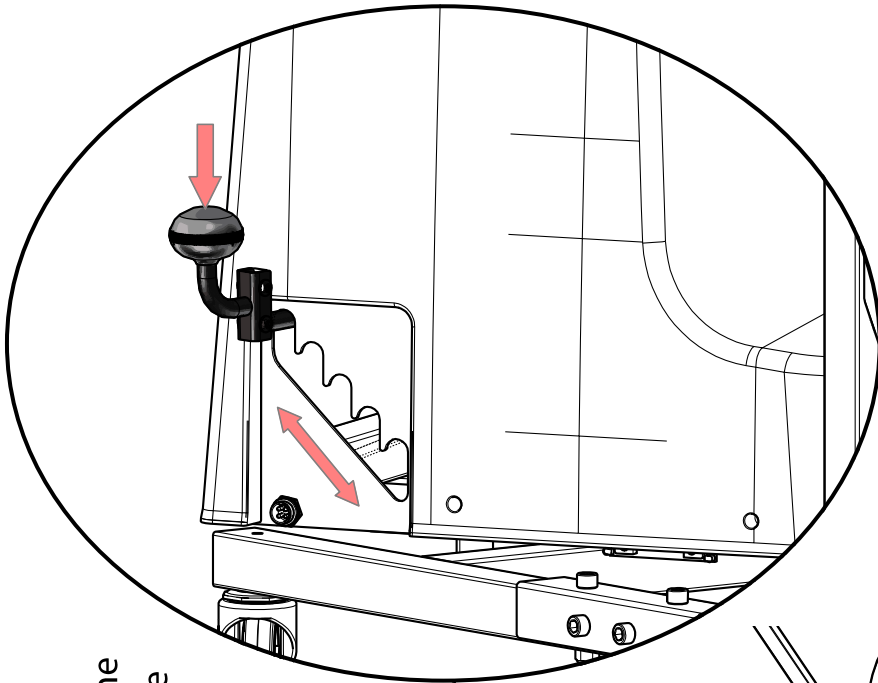


Push down, move to desired slot and release.

- Standard Free Throw line
- High School 3 point line
- College 3 point line
- NBA 3 point Line
- Long Outlet Pass

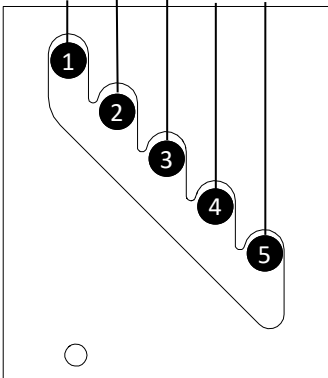

Note: Distance varies based on player height.

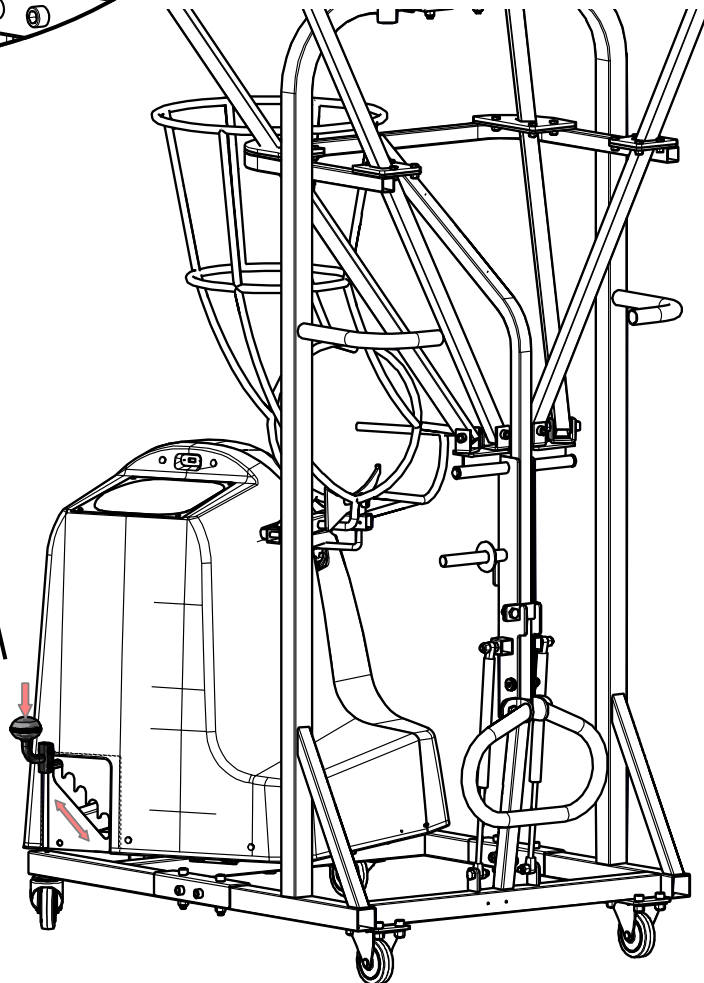



DR. DISH PLACEMENT

Under Basket

(Rebel, Pro and All-Star Models)

24


Place the Dr. Dish under basket until rear net poles are even with the face of the backboard.

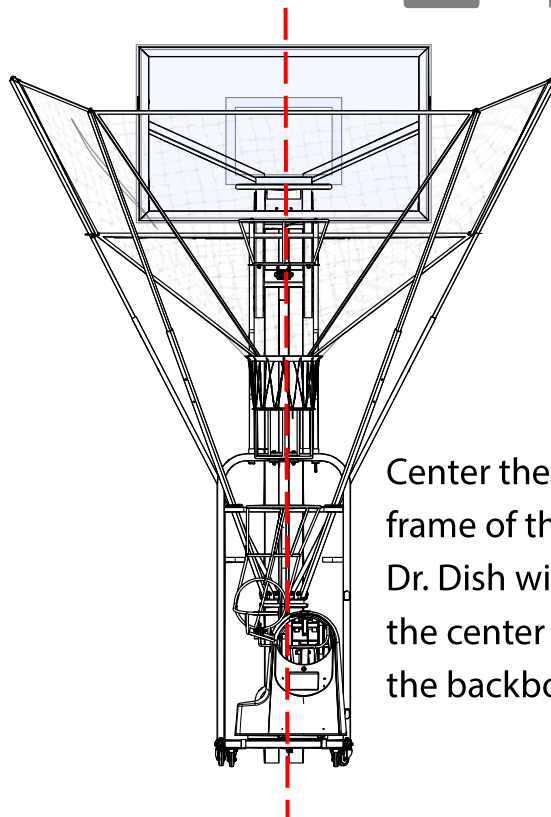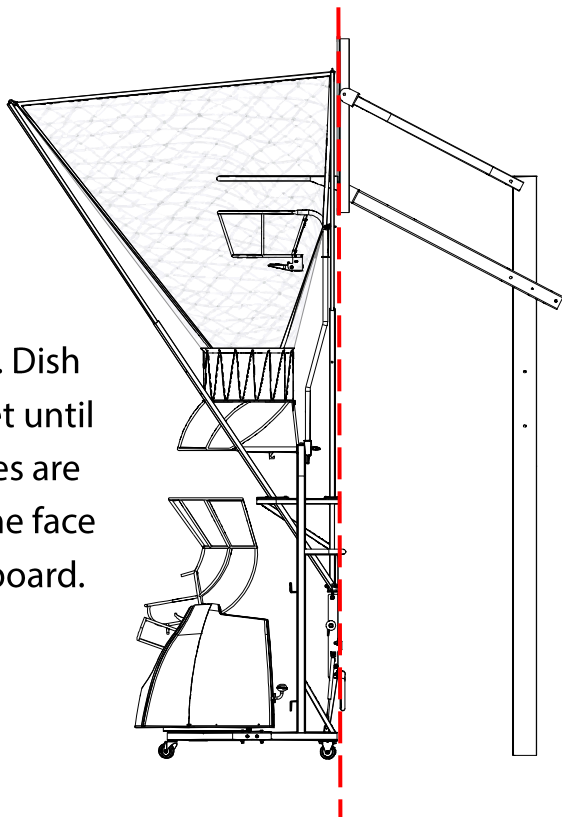


Center the frame of the Dr. Dish with the center of the backboard.

Away from basket

(All-Star Model only)

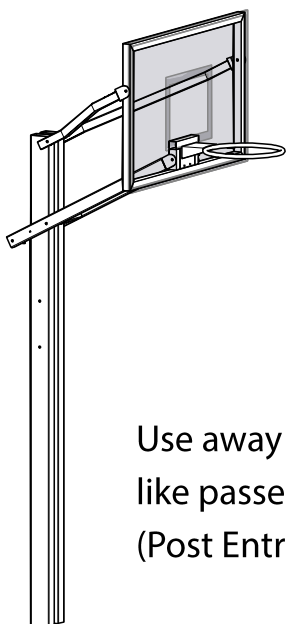

Use away from basket setup for game-like passes to develop your inside game (Post Entry Passes)

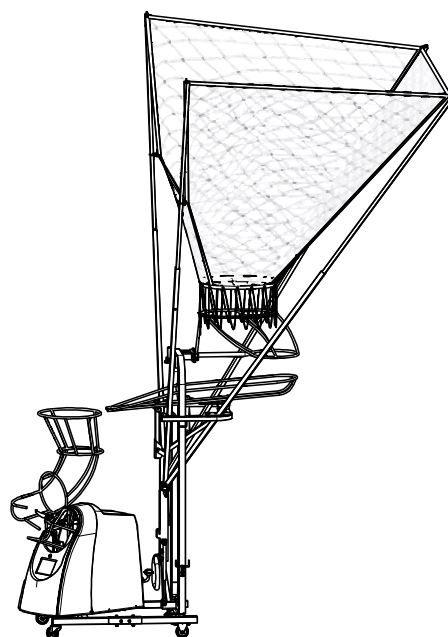

CONSOLE INSTRUCTIONS

Controls

25



Rebel, Pro and All-Star Models

Basic Controls	Description
	Powers on the Dr. Dish
	Starts and Stops a workout or Drill
	Increase and decrease a setting
	Accepts settings
	Select or edit throwing locations
	Edit the number of balls passed to each selected location
	Press once to edit the time between each ball passed. Twice* to enter remote mode
	Press once to reset current stats. Twice to clear all settings
	Selects a pre-programmed drill or workout

Pro and All-Star Models only

Advanced Controls	Description
	Selects a workout program
	View shooting percentage by location after workout
	Press once to enter a players initials (For shooting stats upload via USB) Twice to upload to USB
	Press once for 2 point shot versus 3 point shot. Twice for free throws. (Used for shooting statistics upload)
	Press once for make it mode. Twice for streak mode. (see page 29)
	Select heart rate zone for workout

*Pro & All-Star only

Password

When using the Dr. Dish for the first time the password must be entered

The Default password is 999

A. Press



B. Enter password when prompted using



to select numbers and letters

Note: Remote can be used to bypass the password
(Pro and All-Star Models only)

Basic workouts

To shoot from one location:

A. Aim the Dr. Dish in the direction you want it to pass by pressing and holding

ENTER

while pressing the appropriate



Caution: The Dr. Dish will rotate

B. Press



-To adjust Tempo press





Shooting from multiple locations:

A. Press 

B. Use   to move cursor


C. To select a location press 

D. To deselect a location press 


E. Press  Choose the desired number of balls passed to the selected locations

F. Press  Choose the desired time between each ball passed

G. Press 

H. To pause and resume press 



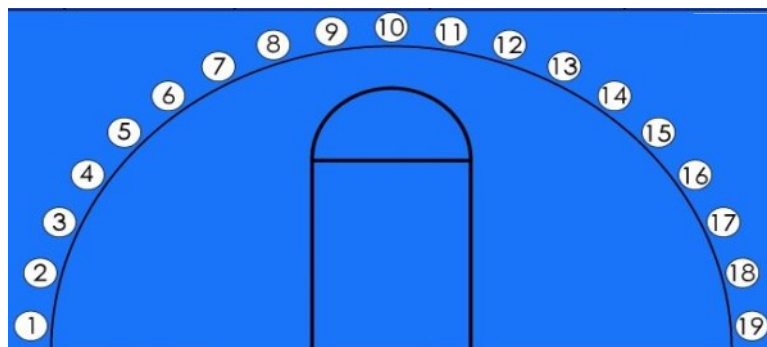

Note: A flashing location indicates the current position of the cursor



To Choose a Pre Programmed Drill:

A. Press  (Continue pressing until desired drill is displayed)

C. Press 

C. You can edit any drill by simply changing a setting in    

Pro and All-Star models only



Note:

- Rebel Model: Drills 1-5 are factory drills. They can be customized but not saved. Drills 6-10 can be customized and saved.

- Pro and All-Star Models: Drill 1-20 are factory drills. They can be customized but not saved. Drills 21-99 can be customized and saved.

To Save a new drill:

A. Press 

B. Choose the drill number you wish to save

C. Choose drill settings in     ← Pro and All-Star models only

D. Press  again

E. Press and hold  until screen reads "Drill Saved"




REMOTE


Pro and All-Star models only

Use:

- The Dr. Dish remote can be used to pause and resume any workout. It can also be used in remote mode to pass a ball.
- To pause a drill press either button on the remote

Remote Mode:

- To activate press  button 2 times.
- Remote mode will appear
- Press 
- Press the bottom button on remote to pass a ball
- To exit remote mode, change tempo or press  twice.

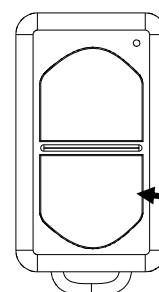


Bottom
Button


Make It and Streak Modes

Pro and All-Star models only

Make it

- Press  once to turn on Make it mode. The user is required to make the selected number of shots at each selected location before the Dish will rotate to the next location.

Streak

- Press  twice to turn on Streak mode. The user is required to make the selected number of shots at each location in a row before the Dish will rotate to the next location.

ADVANCED WORKOUTS

Pro and All-Star models only

Using workouts

A. You can select a workout program before or after entering settings for



B. Press 

ADVANCED WORKOUTS CONTINUED

Pro and All-Star models only

Types of workouts

Time

- Set the amount of time you want to train. The Dr. Dish will automatically stop once the time has expired.

Shots Taken

- Set the amount of total shots you want to take. The Dr. Dish will automatically stop once the goal has been met.

Shots Made


- Set the amount of total shots you want to make. The Dr. Dish will automatically stop once the goal has been met.

****Requires the use of the Shots Made Counter****

■ Requires the use of the Heart Monitor ■

Advanced

- Multiplayer compete

- Select a location for each player. The Front display shows the amount of shots made for each player. Press  after workout to view individuals stats.

****Requires the use of the Shots Made Counter****

■ Requires the use of the Heart Monitor ■

- Interval

- This workout passes to set locations forcing the shooter to hustle to the outer locations and catch there breath on inner locations.

- Locations based on heart rate


- Select a heart rate percentage to workout at. The Dish will change the locations being passed to based on the shooters heart rate.

■ Requires the use of the Heart Monitor ■

REAL-TIME

Pro and All-Star models only

To view real-time shooting statistics

- Statistics can be viewed after a workout has elapsed or by pressing  to pause the current workout.

- If the Shots Made counter is connected average shooting percentage will be displayed.

- Press 


- *Shots Made, Shots Taken, Time and Shooting Percentage* show statistics per zone and per location. Arrow through each selected location to view the stats for that position.

2 POINT SHOOTING

For shooting statistic uploading only

Pro and All-Star models only

Tracking 2 point vs. 3 point shots:

- Before pressing Start on any workout, press  once to turn on 2 point.

- The Dr. Dish now assumes all shots taken are from inside the 3 point line.

- To exit, press  2 times.

FREE THROW SHOOTING

For shooting statistic uploading only

Pro and All-Star models only

Tracking Free Throws:

- Press  2 times, Then press 

- To exit, press  again.

THE DR. DISH APP: SET UP, PAIRING, AND USAGE

Pro and All-Star models only, used for stat-tracking and access to complete workouts



32

To Sign Up:

- Download the Dr. Dish phone app on your device. To create an account choose the “sign up” prompt and follow the instructions..
- To register entirely you must verify your phone number and email.
- Visit tms.drdishbasketball.com to manage teams, view statistics, build you own workouts and more.

To Connect the App to the Dish:



- Turn on the Bluetooth within the devise you’d like to connect to the Dr. Dish.
- Open up the Dr. Dish app, login and click on the settings icon in the upper right corner.
- Click the “Manage Connections” tab.
- This screen will show the possible Dish Machine(s) for you to connect to. Select the desired one and press CONNECT.
**The letters and numbers following are unique to your machine and device.*
- The red bar at the top of your device screen will turn green and the connected icon will show on the Dr. Dish LCD screen to signify a successful connection.

To Push a Dr. Dish Workout from the App to the Dish:




- Verify your device is connected to the machine via Bluetooth.
- Open up the Dr. Dish app, login, view the workout library and locate the workout you want to complete.
- Choose START WORKOUT and then press PLAY button.
- Complete the workout, press the PAUSE button followed by the STOP button to signify you are done shooting.
- Review your shooting heatmap and choose to SAVE or DELETE the stats.
- Only after you see a “Save Successful” message will you know your stats have been saved to your account in our online Training Management System.

SETTINGS






In Settings Mode you can:

- Turn the pre-launch beeper sound on and off
- Calibrate the rotation of the Dr. Dish
- Change Time (entered in military time) (Pro & All-Star Models only)
- Change Date (Pro & All-Star Models only)
- Change the Password to turn the machine on
 - Password can be any combination of letters or numbers, but must be 3 characters
 - To turn off password protection, enter "OFF"
- Check total usage
- Restore the Dr. Dish to factory defaults
- Add a remote using the teach function (Pro & All-Star Models only)
- Control what is displayed on the Front Display (Pro & All-Star Models only)

To enter Settings Mode:

- After powering on machine or after pressing 
- Press and hold   simultaneously for 2 seconds

To navigate Settings Mode:

- Use   to move between selections
- Press  to move between Yes, No and Exit. Hold down  on Yes to enter selection.
- Hold down  on No to back-up or on Exit to exit settings mode.

Maintenance Schedule

The Dr. Dish is designed to be virtually maintenance-free.

If maintenance is required, please contact manufacturer.

Troubleshooting

Balls stuck in net

- After extensive use the net may stretch. Tighten the net by feeding excess bungee cord through the frame working from the front to back. Feed the excess through the cord stops. Cut the excess off with a scissors.

The Dr. Dish enters pause mode

- If the Dr. Dish runs out of balls, it will try to feed another ball for 30 seconds. If it does not feed a ball within that time, it will pause itself. Pressing start will resume the workout from where you left off.

Other Pointers:

- To ensure each pass is consistent, make sure to use properly inflated basketballs.

Cleaning

Use a damp cloth to wipe exterior of machine of dust and residue.

▲ WARNING ▲ AVERTISSEMENT

To reduce the risk of electrical shock, unplug before cleaning or servicing.

Pour réduire le risque d'électrocution, débranchez-le avant de le nettoyer ou de l'entretenir.

Limited Warranty

Who does this warranty cover?

This limited warranty (the “Warranty”) is issued by Airborne Athletics, Inc. (“Airborne Athletics”, “we”, or “us”) to you, a purchaser who purchased a new or factory refurbished Dr. Dish or new Dr. Dish branded accessories directly from us. The Warranty covers only you, the original product purchaser. The Warranty cannot be assigned or transferred to any subsequent purchaser or user and is not available to products that were purchased from any source other than Airborne Athletics or an authorized dealer.

What does this warranty cover?

This Warranty covers defects in the product you purchased from an authorized Airborne Athletics retailer (the “Product”) as follows. Airborne Athletics warrants that the Product is free from defects in materials and workmanship and will, under normal and intended use, function substantially in accordance with our Product documentation and technical specifications. Proof of Product purchase is required as a condition to coverage under this Warranty, and the Product requires an online connection to ensure full functionality.

What is not covered by this warranty?

Regardless of the above, the Warranty does not cover the following:

- Damage or loss of access as a result of Airborne’s termination or suspension of your account.
- Data loss and any costs associated with data recovery.
- Normal wear and tear.
- Defects or malfunctions experienced during or caused by use not in conformity with Product documentation and technical specifications.
- Damage caused by misuse, accident, neglect, abuse, alteration, improper or unauthorized modification, or tampering.
- Damage to your property, home, walls, or floors that may result from installation or removal of the Product.
- Product that has been resold.
- Damage caused by improper or incorrectly performed maintenance or repair.
- Damage caused by improper installation, relocation, or uninstallation.
- Damage caused during shipping or delivery.
- Product or Product parts returned without a Return Material Authorization (RMA) number.
- Commercial use of the Dr. Dish Home and iC3 Product.
- Software and software functionality.

WARRANTY CONTINUED

What is the warranty period?

The Warranty period begins the date the Product is shipped and lasts for the period specified below for the applicable Product:

Product	Warranty Period
Dr. Dish Commercial (Rebel +, All-Star +, CT+)	5 year or 2 million shots (whichever comes first) coverage for parts and standard domestic shipping of said parts. Labor not included.
Factory refurbished Dr. Dish Commercial (Rebel, Rebel +, All-Star +, CT+)	3 years or 1 million shots (whichever comes first) coverage for parts and standard domestic shipping of said parts. Labor not included.
Dr. Dish Home & Factory refurbished Dr. Dish Home	2 year coverage for parts and standard domestic shipping of said parts. Labor not included.
Dr. Dish iC3	1 year coverage for parts. Labor not included.
Dr. Dish Accessories	1 year coverage for parts. Labor not included.

How do you submit a claim?

Call 952-873-2633 or email info@drdishbasketball.com to report any Product issues and open a claim under the Warranty. Our team will reach out to you to attempt to help resolve your issue. If the issue cannot be addressed remotely, Airborne Athletics may dispatch a general technician to further investigate and troubleshoot.

If your Product has a defect or malfunction covered by this Warranty, Airborne Athletics will repair, replace, or refund the Product at the sole discretion of Airborne Athletics. If Airborne Athletics determines that a Product should be replaced, the replacement may be a new or a re-manufactured Product. Airborne Athletics may not return the original Product to you, nor can Airborne Athletics guarantee replacement or repair of the Product without risk to or loss of data stored on your original Product.

Do not return any Product to Airborne Athletics without first receiving a Return Material Authorization (RMA) number and instructions for how to proceed. Airborne Athletics may require you to furnish proof of purchase and/or comply with other requirements before receiving Warranty service.

WARRANTY CONTINUED

37

What law governs the warranty?

The laws of the State of Minnesota, USA, govern this Warranty, without giving effect to any conflict of laws or principles that may provide the application of the law of another jurisdiction.

AIRBORNE ATHLETICS EXPRESSLY DISCLAIMS ANY AND ALL OTHER WARRANTIES, BOTH EXPRESS AND IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

AIRBORNE ATHLETICS AND ANY THIRD-PARTY SERVICE PROVIDERS OR SUPPLIERS SHALL NOT BE LIABLE FOR PERFORMANCE DEFICIENCIES CAUSED OR CREATED BY YOU OR OTHERS YOU ALLOW TO USE THE PRODUCT. AIRBORNE ATHLETICS DOES NOT WARRANT THAT ITS EQUIPMENT'S PERFORMANCE WILL BE UNINTERRUPTED, ERROR-FREE OR COMPLETELY SECURE. AIRBORNE ATHLETICS AND ANY THIRD-PARTY PROVIDERS OR SUPPLIERS SHALL NOT BE LIABLE FOR SERVICE INTERRUPTIONS CAUSED BY FAILURE OF EQUIPMENT, OTHER SOFTWARE OR SERVICES NOT PROVIDED BY AIRBORNE ATHLETICS OR ITS THIRD-PARTY PROVIDERS OR SUPPLIERS, OR FAILURE OF COMMUNICATIONS, POWER OUTAGES, OR OTHER INTERRUPTIONS NOT WITHIN THE COMPLETE CONTROL OF AIRBORNE ATHLETICS OR ITS PROVIDERS OR SUPPLIERS, EVEN IF AIRBORNE ATHLETICS OR ITS THIRD-PARTY PROVIDERS OR SUPPLIERS KNOW OR HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSS. IN THE EVENT OF ANY SYSTEM ERROR OR OMISSION, THE SOLE OBLIGATION OF AIRBORNE ATHLETICS SHALL BE TO PROCESS A CORRECTION OF THE ERROR OR OMISSION AS REASONABLY NECESSARY.

AIRBORNE ATHLETICS DOES NOT ASSUME ANY LIABILITY FOR ANY SPECIAL, INDIRECT, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES OF ANY KIND WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS OR REVENUES, LOSS OF DATA, LOSS OF USE OF THE PRODUCT, COST OF REPLACEMENT OR SUBSTITUTE ITEMS, OR LOSS OF USE DURING THE PERIOD THAT THE PRODUCT IS BEING REPLACED OR REPAIRED. FURTHER, AIRBORNE ATHLETICS SHALL NOT BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, INDIRECT, OR PUNITIVE DAMAGES OF ANY KIND WHATSOEVER, EVEN IF AIRBORNE ATHLETICS HAS BEEN ADVISED AS TO THE POSSIBILITY OF SUCH DAMAGES, FOR ANY CLAIM ARISING FROM OR RELATED TO THIS WARRANTY STATEMENT, REGARDLESS OF THE FORM OF ACTION, WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, LOST REVENUE, LOST PROFIT, LOST DATA, OR PRIVACY, OR ANY OTHER CAUSE OF ACTION OR LEGAL OR EQUITABLE THEORY. IN NO EVENT SHALL AIRBORNE ATHLETICS'S LIABILITY FOR ANY CLAIM ARISING OUT OF OR RELATED TO THIS WARRANTY EXCEED THE PRICE PAID BY YOU FOR PURCHASE OF THE PRODUCT, REGARDLESS OF THE FORM OF ACTION, WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, LOST REVENUE, LOST PROFIT, LOST DATA, OR PRIVACY, OR ANY OTHER CAUSE OF ACTION OR LEGAL OR EQUITABLE THEORY.

More Questions?

If you have questions, or to begin the service process, please contact us at info@airborneathletics.com

DR. DISH ACCESSORIES

AVAILABLE FOR PURCHASE

Custom Fit All Weather Cover



Custom Graphics Kit



6' Power Cord



For pricing and to order visit:
www.drdishbasketball.com

CONTACT INFORMATION



Online: www.drdishbasketball.com

Phone: 952-873-2633

Fax: 952-443-8485

Email: info@drdishbasketball.com

Mail: 1701 W 94th St, Suite 225
Bloomington, MN 55431

